

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

ALLIS-CHALMERS

SHOP MANUAL

MODELS

6060-6070-6080

The model and serial numbers of tractor are linked together to form the Product Identification Number (PIN). The PIN number is located on lower left-hand side of steering console on late production tractors. On earlier models, the PIN is stamped into right-hand side of flywheel housing.

The engine model and serial numbers are stamped on a plate located on upper left-hand side of cylinder block.

INDEX (By Starting Paragraph)

	6060	6070	6080		6060	6070	6080
BRAKES							
Adjust	107	107	107				
Bleed	108	108	108				
Disc Brake Assemblies	110	110	110				
Master Cylinders	109	109	109				
Parking Brake	111	111	111				
CLUTCH	85	85	85				
COOLING SYSTEM							
Radiator	59	59	59				
Thermostat	60	60	60				
Water Pump	61	61	61				
DIESEL FUEL SYSTEM							
Filters and Bleeding	62	62	62				
Injection Nozzles	65	65	65				
Injection Pump	63	63	63				
DIFFERENTIAL							
Adjustment	100	100	100				
Differential Lock	104	104	104				
Overhaul	99	99	99				
R&R Main Housing	98	98	98				
ELECTRICAL							
Alternator and Regulator	76	76	76				
Starting Motor	79	79	79				
ENGINE							
Assembly R&R	29	29	29				
Camshaft	43	43	43				
Connecting Rods and Bearings	49	49	49				
Crankshaft and Bearings	50	50	50				
Cylinder Head	30	30	30				
Cylinder Sleeves	48	48	48				
Flywheel	53	53	53				
Injection Nozzle Sleeves	36	36	36				
Oil Cooler	58	58	58				
Oil Pump	56	56	56				
Pistons, Piston Pins and Rings	47	47	47				
Rocker Arms	35	35	35				
Timing Gear Cover	37	37	37				
Timing Gears	38	38	38				
Valve Clearance Adjustment	31	31	31				
Valves and Seats	32	32	32				
FINAL DRIVE							
Overhaul	106	106	106				
Remove and Reinstall	105	105	105				
FRONT AXLE (Two-Wheel Drive)							
Axle Main Member				4	4	4	
Spindles and Bushings				2	2	2	
Tie Rod and Toe-in				3	3	3	
Wheel Bearings				1	1	1	
FRONT-WHEEL DRIVE AXLE							
Axle Shaft, Steering Knuckle and King Pins				9	9	9	
Differential and Bevel Gears				10	10	10	
Final Drive				8	8	8	
Lubrication				5	5	5	
R&R Axle				7	7	7	
Tie Rod and Toe-in				6	6	6	
Transfer Gearbox				15	15	15	
HYDRAULIC LIFT SYSTEM							
Adjustments				124	124	124	
External Lift Cylinder						142	
Hitch Control Valve				139	139	139	
Lift Housing and Cylinder				140	140	140	
Lift Link				146	146	146	
Pump				131	134	131	
Relief Valve				137	137	137	
Remote Valves				138	138	138	
Reservoir and Filters				115	115	115	
Sensing Bar				145	145	145	
Testing				117	117	117	
Troubleshooting				116	116	116	
POWER STEERING							
Control Valve				22	22	22	
Cylinder				23	23	23	
Lubrication and Bleeding				17	17	17	
Pump				21	21	21	
Relief Valve				20	20	20	
Testing				19	19	19	
Troubleshooting				18	18	18	
POWER TAKE-OFF				112	112	112	
PROTECTIVE FRAME AND CAB							
R&R Cab				148	148	148	
R&R Protective Frame				147	147	147	
TRANSMISSION				90	90	90	
TURBOCHARGER				72	72	72	