

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

CASE/INTERNATIONAL

MODELS 235, 235H, 245, 255, 265 & 275

The tractor model number and product identification (serial) number is on a plate located on the right side of the front frame rail. The engine serial number is stamped into the injection pump mounting pad on right side of engine. Serial number of the ROPS (Roll Over Protective Structure) is located on right side of structure. On some models, the transmission serial number is stamped into the right of case.

INDEX (By Starting Paragraph)

	Models					
	235	235H	245	255	265	275
BRAKES						
Adjustment.....	194	194	194	194	194	194
Operation.....	193	193	193	193	193	193
R&R and Overhaul.....	195	195	195	195	196	197
CLUTCH						
Clutch Linkage						
All Models Without Live Pto.....	112	112	112	112	112	112
Models With Live Pto.....	113	113	113	113	113	113
Clutch Split.....	115	115	116	116	115	117
Cover, Pressure Plate and Disc.....	118	118	118	118	118	118
COOLING SYSTEM						
Belt.....	105	105	105	105	105	105
Radiator.....	103	103	103	103	103	103
Thermostat.....	104	104	104	104	104	104
Water Pump.....	106	106	106	106	106	106
DIESEL FUEL SYSTEM						
Fuel Filter and Lines.....	89	89	89	89	89	89
Fuel Shut-Off Solenoid.....	102	102	102	102	102	102
Glow Plugs.....	101	101	101	101	101	101
Governor and Injection Pump Camshaft....	94	94	94	94	94	94
Injection Pump.....	91	91	91	91	91	91
Injector Nozzles.....	96	96	96	96	96	96
DIFFERENTIAL	186	186	186	186	186	186
ELECTRICAL SYSTEM						
Alternator and Regulator.....	107	107	107	107	107	107
Circuit Description.....	110	110	110	110	110	110
Safety Switches.....	109	109	109	109	109	109
Starting Motor.....	108	108	108	108	108	108

INDEX (CONT.)

	Models					
	235	235H	245	255	265	275
ENGINE						
Cam Followers	74	74	74	74	74	74
Camshaft	78	78	78	78	78	78
Connecting Rods and Bearings	81	81	81	81	81	81
Crankshaft and Main Bearings	82	82	82	82	82	82
Crankshaft Seals	83	83	83	83	83	83
Cylinder Head	69	69	69	69	69	69
Flywheel	85	85	85	85	85	85
Maintenance	64	64	64	64	64	64
Oil Pan	87	87	87	87	87	87
Oil Pump	86	86	86	86	86	86
Pistons, Cylinder Block and Rings	80	80	80	80	80	80
R&R Engine Assembly	68	68	68	68	68	68
Rocker Arms and Push Rods	73	73	73	73	73	73
Rod and Piston Units	79	79	79	79	79	79
Timing Gears	75	75	75	75	75	75
Timing Gear Cover	77	77	77	77	77	77
Valve Clearance	70	70	70	70	70	70
Valve Springs	72	72	72	72	72	72
Valves, Guides and Seats	71	71	71	71	71	71
FINAL DRIVE	187	187	187	187	189	191
FRONT AXLE SYSTEM (TWO-WHEEL DRIVE)						
Axle Main Member	9	9	10	10	11	12
Spindles and Bushings	5	5	6	6	7	8
Steering Bellcrank	15
Tie Rod and Toe-In	2	2	4	2	3	4
Tires, Wheels and Bearings	1	1	1	1	1	1
Tread Adjustment and Drag Link Non-Adjustable Axle	13	13	14	14	14	14
FRONT-WHEEL-DRIVE SYSTEM						
Axle and Steering Linkage	16	16	25	25	...	34
Differential	18	18	27	27	...	36
Differential Bevel Pinion	23	23	32	32	...	41
Differential Bevel Pinion	22	22	31	31	...	40
Front Drive Spindles and Inner Axles	21	21	30	30	...	39
Front Final Drives and Wheel Axles	20	20	29	29	...	38
Front Wheel Drive	24	24	33	33	...	42
Maintenance	17	17	26	26	...	35
HYDRAULIC LIFT SYSTEM						
Auxiliary Valve	216	216	216	216	216	216
Fluid and Filters	202	202	202	202	202	202
Hydraulic Pump	212	212	212	212	212	212
Lift Cover	214	214	214	214	214	214
Troubleshooting	203	203	203	203	203	203
Tests and Adjustments	204	204	205	205	209	211
MANUAL STEERING SYSTEM	44	44	44	44	47	50
POWER STEERING SYSTEM	54	54	57	60

INDEX (CONT.)

	Models					
	235	235H	245	255	265	275
POWER TAKE-OFF	199	199	200	200	200	199
TRANSMISSION (235H HYDROSTATIC)						
Hydrostatic Unit	181
Lubrication	175
Overhaul	182
Range Transmission	183
Tests and Adjustments	177
Troubleshooting	176
TRANSMISSION (235 SLIDING GEAR)						
Inspection	120
Lubrication	121
Overhaul	123
Remove and Reinstall	122
TRANSMISSION (245, 255 AND 265 CONSTANT MESH)						
Inspection	133	133	133	...
Lubrication	134	134	134	...
Overhaul	136	136	136	...
Remove and Reinstall	135	135	135	...
TRANSMISSION (245, 255 AND 265 SYNCHROMESH)						
Inspection	144	144	144	...
Lubrication	145	145	145	...
Overhaul	147	147	147	...
Range Transmission	155	155	155	...
Remove and Reinstall	146	146	146	...
TRANSMISSION (275 MODEL)						
Hydraulic Clutch	171
Inspection	161
Lubrication	162
Overhaul	166
Remove and Reinstall	163

DUAL DIMENSIONS

This service manual provides specifications in both U.S. Customary and Metric (SI) systems of measurement. The first specification is given in the measuring system perceived by us to be the preferred system when servicing a particular component, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of 0.011 inch (0.28 mm) would indicate that we feel the preferred measurement in this instance is the U.S. Customary system of measurement and the Metric equivalent of 0.011 inch is 0.28 mm.