

# Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

## HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

# INDEX (By Starting Paragraph)

<b>BRAKES</b> .....	207	<b>ENGINE, CONT.</b>	
<b>CAB</b> .....	137	Valve Adjustment .....	64
<b>CARBURETOR, GASOLINE</b> .....	94	Valves and Seats .....	62
<b>CLUTCH, SINGLE DISC</b> .....	135	Valve Guides and Springs .....	63
<b>CLUTCH, DUAL DISC</b> .....	136	Valve Rotators .....	65
<b>CLUTCH, POWER TAKE-OFF</b> .....	231, 243	<b>FINAL DRIVE GEARS</b> .....	179, 206
<b>COOLING SYSTEM:</b>		<b>FRONT AXLE</b> .....	1, 20, 35
Radiator .....	122	<b>GOVERNOR:</b>	
Thermostat .....	121	Diesel .....	117
Water Pump .....	123	Non-Diesel .....	119
<b>DIESEL FUEL SYSTEM:</b>		<b>HYDRAULIC LIFT SYSTEM:</b>	
Bleeding .....	104	Adjustments .....	258
Filters .....	103	De-Luxe Control Valves .....	297
Injection Pump .....	114	Lift Cover Assembly, R&R .....	263
Injector Nozzles .....	105	Lift Cylinder, Overhaul .....	265
Troubleshooting .....	95	Priority Valve .....	277
<b>DIFFERENTIAL</b> .....	177, 197	Pump (Piston Type) .....	280
<b>DIFFERENTIAL LOCK</b> .....	183, 201	Pump (Engine Mounted Gear Type) .....	285
<b>ELECTRICAL SYSTEM:</b>		Pump (Internally Mounted Gear Type) .....	287
Alternator and Regulator .....	124	Pump (Engine Mounted Tandem Gear Type) .....	289
Ignition Distributor .....	129	Remote Control Valves .....	293
Starting Motor .....	126	Selector Valve .....	291
Wiring Diagram .....	Page 99	Troubleshooting .....	253
<b>ENGINE:</b>		<b>IGNITION SYSTEM</b> .....	127
Assembly, R&R .....	59	<b>POWER STEERING:</b>	
Camshaft .....	76	Bleed System .....	10, 30
Connecting Rod Bearings .....	84	Control Valve .....	13
Crankshaft and Bearings .....	85	Pump .....	12
Crankshaft Oil Seals .....	86	Steering Gear .....	13, 27, 33
Cylinder Head .....	61	System Pressure .....	11, 31
Cylinders .....	80	<b>POWER TAKE-OFF</b> .....	220, 225, 236
Flywheel, R&R .....	89	<b>REAR AXLE:</b>	
Oil Pan .....	90	Axle Housings .....	193, 205
Oil Pump .....	91	Bearing Adjustment .....	178, 206
Pistons and Rings .....	78	Reduction Gear .....	171, 172
Piston and Rod Removal .....	77	Shaft, R&R .....	190, 206
Piston Pins .....	83	<b>STEERING (Manual)</b> .....	5, 24
Rocker Arms .....	67	<b>TRANSMISSION:</b>	
Timing Gear Cover .....	68	Six-Speed .....	139
Timing Gears .....	71	Eight-Speed (Non-Synchromesh) .....	149
		Eight-Speed (Synchromesh) .....	158

---

## DUAL DIMENSIONS

This service manual provides specifications in both the U.S. Customary and Metric (SI) systems of measurement. The first specification is given in the measuring system perceived by us to be the preferred system when servicing a particular component, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of "0.011 inch (0.28 mm)" would indicate that we feel the preferred measurement, in this instance, is the U.S. system of measurement and the metric equivalent of 0.011 inch is 0.28 mm.