Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

INDEX (By Starting Paragraph)

BELT PULLEY2	
BRAKES	65
Transmission Hand Brake2	68
CAB	15
CARBURETOR	13
CLUTCH	64
CLUTCH, PTO	
COOLING SYSTEM:	
Radiator	48
Thermostat	
Water Pump	
DIESEL FUEL SYSTEM:	
Bleeding1	23
Filters	
Injection Pump	
Injector Nozzles	24
Thermostat	44
Troubleshooting	
DIFFERENTIAL	
DIFFERENTIAL LOCK	61
ELECTRICAL SYSTEM:	
Alternator & Regulator1	52
Generator & Regulator	
Ignition Distributor1	60
Starting Motor	56
ENGINE:	00
Assembly, R&R	72
Camshaft	
Connecting Rod Bearings	98
Crankshaft Bearings	
Crankshaft Oil Seals	00
Cylinder Head	74
Cylinders	94
Engine Balancer	03
Flywheel, R&R	04
Oil Pan	
Oil Pump	
Pistons & Rings	00
Piston & Rod Removal	91
Piston Pins.	
Rocker Arms	
Timing Gear Cover	
Timing Gear	
Turbocharger	
rurboenarger1	01

Valve Adjustment
Valves & Seats
Valve Guides & Springs77
FINAL DRIVE GEARS
FRONT AXLE
FRONT-WHEEL DRIVE $\dots 55A, 56$
GOVERNOR:
Diesel
Non-Diesel
HYDRAULIC LIFT SYSTEM:
Adjustments
Cooler By-Pass Valve
De-Luxe Control Valves
Filters
Lift Cover, R&R
Lift Cylinder, Overhaul
Load Monitor, R&R
Pressure Check
Priority Valve
Pump
Remote Control Valves
Selector Valve
Troubleshooting
IGNITION SYSTEM
POWER STEERING:
Bleed System
Control Valve
Pump
Steering Gear
Steering Motor
System Pressure
With FWD
POWER TAKE-OFF
REAR AXLE:
Axle Housings
Axie Housings
Bearing Adjustment
Shaft, R&R
Reduction Gear
STEERING GEAR (Manual)5
TRANSMISSION:
Dual Power
8-speed (Non-Synchromesh)
8-speed (Synchromesh)
Select-O-Speed

DUAL DIMENSIONS

This service manual provides specifications in both the U.S. Customary and Metric (SI) systems of measurement. The first specification is given in the measuring system perceived by us to be the preferred system when servicing a particular component, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of "0.011 inch (0.28 mm)" would indicate that we feel the preferred measurement, in this instance, is the U.S. system of measurement and the metric equivalent of 0.011 inch is 0.28 mm.