

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

FORD

MODELS 2810-2910-3910

Tractor Series Identification Plate is located under right hood panel or lower down on right side of instrument console. Tractor Serial Number and Engine Serial Number are located on this plate. On tractors equipped with Front-Wheel Drive, Axle identification plate is located on front axle housing.

INDEX (By Starting Paragraph)

BRAKES	149	FRONT-WHEEL DRIVE: (CONT.)	
CAB	220	Drop Housing & Differential	38
CLUTCH, ENGINE	105	Front Drive Shaft	39
CLUTCH, POWER TAKE-OFF	165	Planetary, Wheel Hub & Stub Axle	36
COOLING SYSTEM:		Swivel Housing & Axle Shaft	37
Radiator	100	Transfer Gearbox	40
Thermostat	99	HYDRAULIC LIFT SYSTEM:	
Water Pump	101	Adjustments	176
DIESEL FUEL SYSTEM:		De-Luxe Control Valves (Closed Center)	215
Bleeding	84	Lift Cover Assembly, R&R	181
Filters	83	Lift Cylinder, Overhaul	183
Injection Pump	94	Priority Valve	195
Injector Nozzles	85	Pump (Piston Type)	198
Trouble-shooting	75	Pump (Engine Mounted Gear Type)	203
DIFFERENTIAL	137	Pump (Internally Mounted Gear Type)	205
DIFFERENTIAL LOCK	143	Pump (Engine Mounted Tandem Gear Type)	207
ELECTRICAL SYSTEM:		Remote Control Valves (Open Center)	211
Alternator and Regulator	102	Selector Valve	209
Starting Motor	104	Trouble-shooting	172
ENGINE:		POWER STEERING:	
Assembly, R&R	41	Bleed System	18
Camshaft	58	Control Valve	21,26,29
Connecting Rod Bearings	65	Pump	20
Crankshaft and Bearings	66	Steering Cylinders	32
Crankshaft Oil Seals	67	Steering Gear	21,26,30
Cylinder Head	43	System Pressure	19
Cylinders	61	POWER TAKE-OFF:	
Flywheel, R&R	70	Independent Type	158
Oil Pan	71	Transmission Type	155
Oil Pump	72	REAR AXLE:	
Pistons and Rings	60	Axle Housings	147
Piston and Rod Removal	59	Bearing Adjustment	148
Piston Pins	64	Shaft, R&R	148
Rocker Arms	49	REDUCTION GEARBOX	134
Timing Gear Cover	50	STEERING (Manual)	5,10,14
Timing Gears	53	TRANSMISSION:	
Valve Adjustment	46	Six-Speed	
Valves and Seats	44	(Manual Reversing)	118
Valve Guides and Springs	45	Eight-Speed (Non- Synchronesh)	108
Valve Rotators	47	Eight-Speed (Synchronesh)	126
FINAL DRIVE GEARS	148		
FRONT AXLE (Two-Wheel Drive):			
Axle Center Member	2		
Drag Links & Toe-In	4		
Front Support	3		
Spindle Bushings	1		
FRONT-WHEEL DRIVE:			
Drive Axle Assembly, R&R	35		