

# Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

## HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

# SHOP MANUAL

# JOHN DEERE

MODELS 850, 950 and 1050

**Tractor serial number is located on plate attached to rear machined face of tractor center housing directly below pto output shaft. Engine serial number is stamped in machined pad on left side of engine near front.**

## INDEX (By Starting Paragraph)

	850	950	1050
<b>BRAKES</b> .....	154	154	154
<b>CLUTCH</b> .....	105	105	105
<b>COOLING SYSTEM</b> .....	95	95	95
<b>DIESEL FUEL SYSTEM</b>			
Filters & Bleeding .....	65	65	65
Nozzles .....	70	70	70
Pump .....	67	67	67
Thermostart .....	80	80	80
Timing .....	67	67	67
<b>DIFFERENTIAL</b>			
Front .....		30	30
Rear .....	140	140	140
<b>ELECTRICAL SYSTEM</b>			
Alternator and Regulator .....	100	100	100
Starter .....	101	101	101
<b>ENGINE</b>			
Camshaft .....	55	55	55
Connecting Rods .....	59	59	59
Crankshaft .....	60	60	60
Cylinder Head .....	40	40	40
Flywheel .....	62	62	62
Oil Pump .....	63	63	63
Pistons, Rings & Sleeves .....	57	57	57
Remove and Reinstall Assembly .....	37	37	37
Tappet Adjustment .....	45	45	45
Timing Gears .....	52	52	52
Valves & Seats .....	46	46	46
<b>FINAL DRIVE</b>			
Front .....		25	25
Rear .....	150	150	150
<b>FRONT AXLE</b>			
Four Wheel Drive .....		4	4
Two Wheel Drive .....	1	1	1
<b>FRONT WHEEL DRIVE</b> .....		25	25
<b>GOVERNOR</b> .....	82	82	82
<b>HYDRAULIC SYSTEM</b> .....	170	170	170
<b>POWER TAKE OFF</b> .....	160	160	160
<b>STEERING GEAR</b> .....	10	10	10
<b>TRANSMISSION</b> .....	127	127	127
<b>TURBOCHARGER</b> .....		.....	90