

# Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

## HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

# SHOP MANUAL

# DEUTZ-ALLIS

## MODELS 6240—6250—6260—6265—6275

On Models 6240, 6250 and 6260, tractor serial number is stamped on left front side of clutch housing. On Models 6265 and 6275, tractor serial number is stamped on right side of front axle support bracket. A chassis nameplate is also attached to right front side of hood side cover. On all models, engine serial number and model number is stamped on a nameplate attached to left side of engine crankcase.

## INDEX (By Starting Paragraph)

	6240	6250	6260	6265	6275
<b>BRAKES</b>					
Adjustment . . . . .	121	121	121	121	121
Bleeding . . . . .	...	...	120	120	120
Brake Calipers and Discs . .	...	...	125	...	...
Brake Shoes and Drums . . .	123	...	...	127	127
Disc Brake . . . . .	...	124	124	...	...
Master Cylinder . . . . .	...	...	122	122	122
Parking Brake . . . . .	126	126	126	127	127
Wheel Cylinders . . . . .	...	...	...	128	128
<b>CAB</b>					
Remove and Reinstall . . . . .	...	...	152	152	152
<b>CLUTCH</b>					
Adjustment . . . . .	79	79	79	79	79
Remove and Reinstall . . . . .	82	82	82	82	82
Tractor Split . . . . .	80	80	80	80	80
<b>COOLING SYSTEM</b>					
Cooling Air Blower . . . . .	56	56	56	56	56
<b>DIESEL FUEL SYSTEM</b>					
Filter and Bleeding . . . . .	60	60	60	60	60
Injector Nozzles . . . . .	61	61	61	61	61
Injection Pump . . . . .	69	69	69	69	69
<b>DIFFERENTIAL</b>					
Differential Lock . . . . .	112	112	112	113	113
R&R and Overhaul . . . . .	110	110	110	111	111

# INDEX (CONT.)

	Models				
	6240	6250	6260	6265	6275
<b>ELECTRICAL SYSTEM</b>					
Alternator and Regulator ..	75	75	75	75	75
Starter Motor .....	78	78	78	78	78
<b>ENGINE</b>					
Assembly, R&R .....	35	35	35	35	35
Camshaft and					
Cam Followers .....	43	43	43	43	43
Connecting Rods					
and Bearings .....	46	46	46	46	46
Crankshaft Balancer .....	...	...	...	51	51
Crankshaft and					
Bearings .....	47	47	47	47	47
Crankshaft Oil Seals .....	48	48	48	48	48
Cylinders Heads .....	36	36	36	36	36
Flywheel .....	50	50	50	50	50
Oil Pan .....	53	53	53	53	53
Oil Pump .....	54	54	54	54	54
Pistons, Rings and					
Cylinders .....	45	45	45	45	45
Rocker Arms .....	39	39	39	39	39
Timing Gear Cover .....	41	41	41	41	41
Timing Gears .....	42	42	42	42	42
Valve Clearance					
Adjustment .....	40	40	40	40	40
Valves, Seats and Guides ..	37	37	37	37	37
Valve Springs and					
Rotators .....	38	38	38	38	38
<b>FRONT AXLE (Two Wheel Drive)</b>					
Axle Assembly, R&R .....	1	1	1	1	1
Front Wheel Bearings .....	2	2	2	2	2
Spindles and Bushings .....	3	3	3	3	3
Tie Rods and Toe-in .....	4	4	4	4	4
<b>FRONT WHEEL DRIVE AXLE</b>					
Axle Assembly, R&R .....	7	7	7	7	7
Axle Shaft and					
Universal Joint .....	10	10	10	10	10
Differential and Bevel					
Drive Gears .....	11	11	11	11	11
Final Drive and					
Wheel Hub .....	8	8	8	8	8
Lubrication .....	6	6	6	6	6
Pivot Housing and					
Kingpins .....	9	9	9	9	9
Transfer Case .....	17	17	17	18	18

# INDEX (CONT.)

	Models				
	6240	6250	6260	6265	6275
<b>HYDRAULIC SYSTEM</b>					
Adjustment . . . . .	146	146	146	146	146
Auxiliary Remote Valves . .	150	150	150	151	150
Draft Pick-up Linkage . . . .	145	145	145	145	145
Fluid and Filters . . . . .	135	135	135	135	135
Hydraulic Power Lift . . . . .	140	140	140	140	140
Hydraulic Pump . . . . .	138	138	138	138	138
Testing . . . . .	136	136	136	136	136
<b>MAIN DRIVE BEVEL GEARS</b>					
Remove and Reinstall . . . . .	91	91	91	105	105
<b>MANUAL STEERING SYSTEM</b>					
Steering Gear . . . . .	20	20	...	...	...
<b>POWER STEERING SYSTEM</b>					
Lubrication and Bleeding . .	22	22	22	22	22
Steering Control Valve . . . .	27	27	27	27	27
Steering Cylinder . . . . .	30,31	30,31	30,31	30,31	30,31
Testing . . . . .	24	24	24	24	24
Trouble-shooting . . . . .	23	23	23	23	23
<b>POWER TAKE-OFF</b>					
Drive Shaft . . . . .	131	131	131	132,133	132,133
Output Shaft . . . . .	130	130	130	132,133	132,133
<b>REAR AXLE</b>					
R&R and Overhaul . . . . .	115	116	116	117	117
<b>TRANSMISSION (6240—6250—6260)</b>					
Countershaft . . . . .	91	91	91	...	...
Creeper Gears . . . . .	95A	95A	95A	...	...
Gearshift Cover . . . . .	85	85	85,86	...	...
Input Shaft . . . . .	88,89	88,89	88,89	...	...
Lubrication . . . . .	83	83	83	...	...
Mainshaft . . . . .	90	90	90	...	...
Reverse Gear . . . . .	95	95	95	...	...
Shift Shafts and Forks . . . .	87	87	87	...	...
Tractor Rear Split . . . . .	84	84	84	...	...
<b>TRANSMISSION (6265—6275)</b>					
Countershaft . . . . .	...	...	...	103	103
Drive Shaft . . . . .	...	...	...	102	102
Gearshift Cover . . . . .	...	...	...	98,99	98,99
Input Shaft . . . . .	...	...	...	101	101
Lubrication . . . . .	...	...	...	96	96
Mainshaft . . . . .	...	...	...	104	104
Remove and Reinstall . . . . .	...	...	...	97	97
Shift Shafts and Forks . . . .	...	...	...	100	100