

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

INDEX (By Starting Paragraph)

SERIES	600-601 800-801	700-701	2030-2130 4030-4130	1801 4040	SERIES	600-601 800-801	700-701	2030-2130 4030-4130	1801 4040
	2031-2131	900-901	4030-4130 (4121 is Similar)	4140		2031-2131	900-901	4030-4130 (4121 is Similar)	4140
	501-2111	4031-4131	2110-4110			501-2111	4031-4131	2110-4110	
BELT PULLEY	294	294	294	294	FRONT AXLE				
BRAKES	285	285	285	285	Axle Main Member	33	3	24	11
CARBURETOR					Drag Links and Toe-in	34A	4	25	13
(Gasoline)	118	118	118	118	Front Support	34	3		12
(LP-Gas)	121	121	121	121	Pedestal R&R			19, 21	16
CLUTCH					Pedestal Overhaul.			20, 22	
Adjustment	164	164, 166	164, 166	164	Steering Spindles..	32	1	23	10
R&R and Overhaul.	165	165, 167	165, 167	165	GOVERNOR				
COOLING SYSTEM					(Non-Diesel)	146	146	146	146
Pump R&R and Overhaul	153	153	153	153	HYDRAULIC LIFT SYSTEM				
Radiator	150	150	150	151	Back Pressure				
DIESEL FUEL SYSTEM					Valve, R&R	313	313	313	313
Filters and					Constant Draft Con- trol, Adjustment	310	310	310	310
Bleeding	129	129	129	129	Control Valve, Overhaul	316	316	316	316
Injection Pump	139	139	139	139	Cyl. & Piston, Overhaul	319	319	319	319
Nozzles	131	131	131	131	Implement,				
Quick Checks	128	128	128	128	Bobbing	306	306	306	306
DIFFERENTIAL					Implement Position				
Overhaul	272	272	272	272	Adjustment	311	311	311	311
Remove and Reinstall	265	269	270	271	Filter	324	324	324	324
ENGINE					Lift Cover, R&R	312	312	312	312
Assembly R&R	83	82	83	82	Pump, Overhaul ..	327	326, 327	326, 327	327
Cam Followers	94	94	94	94	Pump, R&R	325	325	325	325
Camshaft	99	99	99	99	Relief Valve, R&R ..	329	329	329	329
Connecting Rod					Remote Control				
Bearings	108	108	108	108	Valve	331, 339	331, 339	331, 339	331, 339
Crankshaft and					Safety Valve, R&R.	315	315	315	315
Bearings	109	109	109	109	Special Control				
Cylinder Head	85, 86	85, 86	85, 86	85, 86	Valving	323	323	323	323
Cylinders	103	103	103	103	System Pressure				
Engine Balancer ...	112	112	112	112	Check	313	313	313	313
Flywheel R&R	114	114	114	114	Valve Linkage	321	321	321	321
Ignition	158	158	158	158	Work Cylinder, R&R	314	314	314	314
Main Bearings	109	109	109	109	Hydraulic Power				
Oil Pump	116, 117	116, 117	116, 117	116, 117	Package				345
Pistons	103	103	103	103	IGNITION AND ELECTRICAL SYSTEM				
Piston Pins	106, 107	106, 107	106, 107	106, 107	Generator and Regulator	154	154	154	154
Piston and Rod					Starting motor	156	156	156	156
Removal	100	100	100	100	Wiring Diagrams..	350	350	350	350
Piston Rings	101, 102	101, 102	101, 102	101, 102	LP GAS SYSTEM				
Rocker Arms	95	95	95	95	Carburetor	121	121	121	121
Tappets	94	94	94	94	Filter	123	123	123	123
Timing Gear Cover.	96	96	96	96	Principles of				
Timing Gears	97	97	97	97	Operation	119	119	119	119
Valves & Seats....	89	89	89	89	Regulators &				
Valve Guides					Vaporizer, R&R. 124, 127	124, 127	124, 127	124, 127	124, 127
& Springs	90	90	90	90	Regulator Overhaul	122, 126	122, 126	122, 126	122, 126
Valve Rotators	91	91	91	91	Trouble Shooting... 120	120	120	120	120
FINAL DRIVE					Vaporizer Overhaul . 125, 127	125, 127	125, 127	125, 127	125, 127
Axle Housings	283	276	283	276	POWER STEERING				
Bevel Pinion	273	273	273	273	Bleed System	37	68	37	49, 60
Bevel Ring Gear... 274	274	274	274	274	Control Valve.....	39	73	39	58, 64
Bull Gear &					Linkage Adjust. ...		70		53
Bearings R&R ...	280		280		Power Cylinder, Overhaul		46	74	48
Differential					Pump, Overhaul ..	75, 79	75, 77, 79	79	58, 67
Overhaul	272	272	272	272	System Operating				
Wheel Axle Shaft					Pressure	75, 79	71	79	51, 61
Brgs. Adjustment .	278	275	278	275	POWER TAKE OFF				
Wheel Axle Shaft					Countershaft		291	291	291
Brgs. Renew	280	276	280	276	Input Shaft		293	293	293
Wheel Axle Shaft					Output Shaft	288	288, 289	288, 289	288, 289
R&R	280	276	280	276	Shifter Unit	290	290	290	290

INDEX (Continued)

SERIES	600-601		2030-2130		1801
	800-801	2031-2131	700-701	4030-4130	
	2120-4120	900-901	2110-4110	(4121 is Similar)	4040
	501-2111	4031-4131			4140
REAR AXLE					
Bearing, Renewal...	280	276	280	276	276
Shaft, R&R	280	276	280	276	276
STEERING GEAR					
Adjustment	35	5, 39	26	39	53, 62
Overhaul	36	9, 44	31	44	54, 65
Remove and Reinstall.	36	8, 40	30	40	54, 63
TRANSMISSION (Four-Speed)					
Assembly R&R	185	185	185	185	185
Clutch Shaft	189	189	189	189	189
Countershaft	192	192	192	192	192
Mainshaft	190	190	190	190	190
PTO Shifter & Brg. Support	194, 290	194, 290	194, 290	194, 290	194, 290
Reverse Gear	193	193	193	193	193
Shifter Rails and Fork	187	187	187	187	187
TRANSMISSION (Five-Speed)					
Assembly R&R		195	195	195	
Clutch Shaft		200	200	200	
Countershaft		204	204	204	
Main Drive Gear & Shaft		201	201	201	

SERIES	600-601		2030-2130		1801
	800-801	2031-2131	700-701	4030-4130	
	2120-4120	900-901	2110-4110	(4121 is Similar)	4040
	501-2111	4031-4131			4140
TRANSMISSION, FIVE SPEED (Cont.)					
Reverse Gear		199	199	199	
Shifter Rails & Forks		197	197	197	
TRANSMISSION (Combination)					
Assembly R&R		170	170	170	170
Cluster Shaft		177	177	177	177
Clutch Shaft		173	173	173	173
Drive Shaft		174	174	174	174
Shifter Rails & Forks		171	171	171	171
TRANSMISSION (Reversing)					
Assembly R&R		178	178	178	178
Overhaul		179	179	179	179
"SELECT-O-SPEED" TRANSMISSION					
Adjustment		223	223	223	223
Assembly R&R		237	237	237	237
Control Valve R&R .		238	238	238	238
Operation		218	218	218	218
Overhaul		232	232	232	232
Pump R&R		241	241	241	241
PTO System		259	259	259	259
Trouble Shooting ..		229	229	229	229
Oil Filter		233	233	233	233

