

# Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

## HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

# SHOP MANUAL

# INTERNATIONAL HARVESTER

**SERIES**  
**5088-5288-5488**

Engine serial number is stamped on left side of engine crankcase. Tractor serial number is stamped on name plate attached to right side of transmission housing.

## INDEX (By Starting Paragraph)

|  | 5088 | 5288 | 5488 |
|--|------|------|------|
| <b>BRAKES</b>                              |      |      |      |
| Adjustment .....                           | 116  | 116  | 116  |
| Bleed .....                                | 117  | 117  | 117  |
| Control Valve .....                        | 119  | 119  | 119  |
| R&R and Overhaul .....                     | 118  | 118  | 118  |
| <b>CLUTCH, MASTER</b>                      |      |      |      |
| Adjustment .....                           | 84   | 84   | 84   |
| Clutch Pack .....                          | 86   | 86   | 86   |
| Control Valve .....                        | 85   | 85   | 85   |
| Operating Pressure .....                   | 83   | 83   | 83   |
| <b>COOLING SYSTEM</b>                      |      |      |      |
| Coolant Filter-Conditioner .....           | 72   | 72   | 72   |
| Fan .....                                  | 69   | 69   | 69   |
| Radiator .....                             | 70   | 70   | 70   |
| Water Pump .....                           | 71   | 71   | 71   |
| <b>DIESEL FUEL SYSTEM</b>                  |      |      |      |
| Ether Starting Aid .....                   | 64   | 64   | 64   |
| Filters and Bleeding .....                 | 56   | 56   | 56   |
| Injection Nozzles .....                    | 61   | 61   | 61   |
| Injection Pump .....                       | 57   | 57   | 57   |
| <b>DIESEL TURBOCHARGER</b> .....           | 65   | 65   | 65   |
| <b>DIFFERENTIAL</b> .....                  | 107  | 107  | 107  |
| <b>ELECTRICAL SYSTEM</b>                   |      |      |      |
| Alternator and Regulator .....             | 73   | 73   | 73   |
| Digital Data Center .....                  | 78   | 78   | 78   |
| Sentry System .....                        | 81   | 81   | 81   |
| Starting Motor .....                       | 76   | 76   | 76   |
| Starting Solenoid .....                    | 77   | 77   | 77   |
| <b>ENGINE</b>                              |      |      |      |
| Assembly, R&R .....                        | 29   | 29   | 29   |
| Cam Followers .....                        | 34   | 34   | 34   |
| Camshaft .....                             | 42   | 42   | 42   |
| Coolant Directors and Nozzle Sleeves ..... | 31   | 31   | 31   |
| Connecting Rods and Bearings .....         | 47   | 47   | 47   |
| Crankshaft and Main Bearings .....         | 48   | 48   | 48   |
| Crankshaft Oil Seals .....                 | 49   | 49   | 49   |
| Cylinder Head .....                        | 30   | 30   | 30   |
| Flywheel .....                             | 51   | 51   | 51   |
| Oil Cooler .....                           | 54   | 54   | 54   |
| Oil Jet Tubes .....                        | 55   | 55   | 55   |
| Oil Pressure Regulator .....               | 53   | 53   | 53   |
| Oil Pump .....                             | 52   | 52   | 52   |
| Piston Pins .....                          | 46   | 46   | 46   |
| Piston and Rod .....                       | 44   | 44   | 44   |

# INDEX (CONT.)

|  | 5088 | 5288 | 5488 |
|--|------|------|------|
| <b>ENGINE (CONT.)</b>                    |      |      |      |
| Piston, Sleeves and Rings .....          | 45   | 45   | 45   |
| Timing Gear Cover .....                  | 37   | 37   | 37   |
| Timing Gears .....                       | 38   | 38   | 38   |
| Valve Guides, Springs and Rotators ..... | 33   | 33   | 33   |
| Valve Levers .....                       | 35   | 35   | 35   |
| Valves and Seats .....                   | 32   | 32   | 32   |
| Valve Timing .....                       | 36   | 36   | 36   |
| <br>                                     |      |      |      |
| FINAL DRIVE .....                        | 114  | 114  | 114  |
| <br>                                     |      |      |      |
| <b>FRONT SYSTEM</b>                      |      |      |      |
| All-Wheel Drive .....                    | 5    | 5    | 5    |
| Axle Main Member .....                   | 1    | 1    | 1    |
| Steering Spindles .....                  | 4    | 4    | 4    |
| Tie Rods and Toe-in .....                | 3    | 3    | 3    |
| <br>                                     |      |      |      |
| <b>HYDRAULIC SYSTEM</b>                  |      |      |      |
| Alternating Check Valve .....            | 158  | 158  | 158  |
| Auxiliary Valves .....                   | 155  | 155  | 155  |
| Female Coupler .....                     | 159  | 159  | 159  |
| Hydraulic Lift .....                     | 124  | 124  | 124  |
| Hydraulic Pump .....                     | 149  | 149  | 149  |
| Hydraulic Seat .....                     | 161  | 161  | 161  |
| Lift Housing .....                       | 140  | 140  | 140  |
| Motor Priority Valve .....               | 157  | 157  | 157  |
| Pump Drive .....                         | 154  | 154  | 154  |
| System Clean-up .....                    | 164  | 164  | 164  |
| Test and Adjust .....                    | 126  | 126  | 126  |
| Troubleshooting .....                    | 125  | 125  | 125  |
| <br>                                     |      |      |      |
| <b>POWER STEERING SYSTEM</b>             |      |      |      |
| Filter, Lubrication and Bleeding .....   | 17   | 17   | 17   |
| Hand Pump .....                          | 25   | 25   | 25   |
| Hydraulic Pump .....                     | 24   | 24   | 24   |
| Operational Tests .....                  | 19   | 19   | 19   |
| Priority Flow Divider .....              | 26   | 26   | 26   |
| Steering Cylinder .....                  | 27   | 27   | 27   |
| Troubleshooting .....                    | 18   | 18   | 18   |
| <br>                                     |      |      |      |
| <b>POWER TAKE-OFF</b>                    |      |      |      |
| Control Valve .....                      | 123  | 123  | 123  |
| Drive Gears .....                        | 122  | 122  | 122  |
| Operating Pressure .....                 | 120  | 120  | 120  |
| R&R and Overhaul .....                   | 121  | 121  | 121  |
| <br>                                     |      |      |      |
| <b>TRANSMISSION, RANGE</b>               |      |      |      |
| Overhaul .....                           | 101  | 101  | 101  |
| Remove and Reinstall .....               | 100  | 100  | 100  |
| Shift Linkage .....                      | 97   | 97   | 97   |
| Tractor Split .....                      | 99   | 99   | 99   |
| <br>                                     |      |      |      |
| <b>TRANSMISSION, SPEED</b>               |      |      |      |
| R&R and Overhaul .....                   | 92   | 92   | 92   |
| Shift Linkage .....                      | 90   | 90   | 90   |
| Transmission Control Valve .....         | 88   | 88   | 88   |
| Transmission Lubrication Valve .....     | 89   | 89   | 89   |

---

This service manual provides specifications in both the U.S. Customary and Metric (SI) system of measurements. The first specification is given in the measuring system used during manufacture, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of "0.011 inch (0.279 mm)" would indicate that the equipment was manufactured using the U.S. system of measurement and the metric equivalent of 0.011 inch is 0.279 mm.