

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

MASSEY FERGUSON

MODEL MF285

Tractor serial number stamped on instrument console name plate.
Engine serial number stamped on left hand side of engine block.

INDEX (By Starting Paragraph)

BRAKES		ENGINE	
Adjustment	102	Assembly R&R	15
Overhaul	103	Camshaft	32
		Connecting Rods & Bearings	36
CLUTCH		Crankshaft	37
Engine Clutch	68	Cylinder Head	17
IPTO Clutch	110	Cylinder Sleeves	34
		Engine Balancer	38
COOLING SYSTEM		Flywheel	42
Radiator	62	Oil Seals	24,41
Thermostat	63	Oil Pump	44
Water Pump	64	Piston & Rings	34
		Rocker Arms	22
DIESEL FUEL SYSTEM		Tappet Adjustment	23
Bleeding	47	Timing Gears	25
Filters	46	Valves	18
Injection Nozzles	49	FINAL DRIVE	97
Injection Pump	57	FRONT SYSTEM	1
Tank	61	HYDRAULIC SYSTEM	112
Timing	59	INDEPENDENT POWER	
Trouble Shooting	49	TAKE-OFF	104
DIFFERENTIAL	88	STEERING SYSTEM	3
DIFFERENTIAL LOCK	92	TRANSMISSION	
ELECTRICAL SYSTEM		Assembly Removal	71
Alternator	65	Multipower Controls	75
Circuit Description	67	Rear Planetary Unit	77
Starting Motor	66	Shaft & Gears	79