

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

INDEX (By Starting Paragraph)

Models
670, 770, 870,
970 and 1070

Models
670, 770, 870,
970 and 1070

COOLING SYSTEM

Radiator	126
Thermostat	127
Water Pump	128

CLUTCH

Clutch Assembly	
Single Stage Clutch	138
Dual Stage Clutch	139
Clutch Linkage Adjustment	136
Clutch Shaft and Release Bearing	140
Clutch Split	137

DIESEL FUEL SYSTEM

Fuel Filters and Lines	110
Governor and Injection Pump Camshaft	
670 Model	117
Injector Nozzles	121
Injection Pump	
670 Model	113
770, 870, 970 and 1070 Models	115
Preheater / Glow Plugs	125

DIFFERENTIAL

Differential and Bevel Gears	157
Differential Lock	156

ELECTRICAL SYSTEM

Alternator and Regulator	129
Circuit Description	134
Safety Switches	133
Starter	132

ENGINE

(MODEL 670)

Cam Followers	56
Camshaft	64
Connecting Rod and Bearings	68
Crankshaft and Main Bearings	69
Crankshaft Front Oil Seal	70
Crankshaft Rear Oil Seal	71
Cylinder Head	51
Flywheel	72
Maintenance	46
Oil Sump	73
Oil Pump and Pressure Relief Valve	74
Piston, Rings and Cylinder	66
Piston Pin	67
R & R Engine Assembly	50
Rocker Arms and Push Rods	55
Rod and Piston Units	65

ENGINE

(MODEL 670) (Cont.)

Timing Gears	57
Timing Gear Cover	62
Timing Gear Housing	63
Valve Clearance	52
Valves, Guides and Seats	53
Valve Springs	54

ENGINE MODELS

770, 870, 970 AND 1070

Cam Followers	88
Camshaft	95
Connecting Rod and Bearings	99
Crankshaft and Main Bearings	100
Crankshaft Front Oil Seal	101
Crankshaft Rear Oil Seal	102
Cylinder Head	82
Engine Balancer	
970 and 1070 Models	106
Flywheel	103
Maintenance	76
Oil Pump and Pressure Relief Valve	105
Oil Sump	104
Piston, Rings and Cylinder	97
Piston Pin	98
R & R Engine Assembly	
770 Models	80
870, 970 and 1070 Models	81
Rocker Arms and Push Rods	87
Rod and Piston Units	96
Timing Gear Cover	93
Timing Gear Housing	94
Timing Gears	89
Valve Clearance	
770 and 870 Models	83
970 and 1070 Models	84
Valves, Guides and Seats	85
Valve Springs	86

FOUR-WHEEL DRIVE FRONT AXLE SYSTEM (670 AND 770 MODELS)

Differential and Input Bevel Gears	11
Front Axle Assembly and Steering Linkage	7
Front Drive Spindle	10
Front Final Drive	9
Front-Wheel Drive Gear Case	12
Maintenance	6

	Models
	670, 770, 870, 970 and 1070
FOUR-WHEEL DRIVE FRONT AXLE SYSTEM (870 MODEL)	
Differential	20
Differential Input	19
Front Axle Assembly and Steering Linkage	15
Front Final Drive and Spindle	17
Front-Wheel Drive Gear Case	21
Maintenance	14
FOUR-WHEEL DRIVE FRONT AXLE SYSTEM (970 AND 1070 MODELS)	
Differential	30
Differential Input	29
Front Axle Assembly and Steering Linkage	24
Front Final Drive and Spindle	27
Front-Wheel Drive Gear Case	31
Maintenance	23
Outer Drive Axle and Reduction	26
HYDRAULIC LIFT SYSTEM	
Fluid And Filters	178
Hydraulic Pump	186
Rockshaft and Housing	
670 and 770 Models	187
870, 970 and 1070 Models	192
Tests and Adjustments	179
MANUAL STEERING SYSTEM	
Models With Manual Steering	32
POWER STEERING SYSTEM	
Filter and Bleeding	36
Power Cylinder	43

	Models
	670, 770, 870, 970 and 1070
POWER STEERING SYSTEM (Cont.)	
Pump	41
Steering Control Valve	44
System Pressure and Flow	38
Troubleshooting	37
POWER TAKE OFF	
Mid Pto	
670 and 770 Models	173
870, 970 and 1070 Models	175
Rear Pto	
670 and 770 Models	169
870, 970 and 1070 Models	171
REAR AXLE, FINAL DRIVE AND BRAKES	
Brakes	
670 and 770 Models	164
870, 970 and 1070 Models	166
Rear Axle And Final Drive	
670 and 770 Models	159
870, 970 and 1070 Models	162
TRANSMISSION (670 AND 770 MODELS)	
Lubrication	142
Overhaul	146
Remove and Reinstall	143
TRANSMISSION (870, 970 AND 1070 MODELS)	
Front-Wheel Drive Gears	155
Lubrication	149
Main Transmission	151
Range Transmission	153
Transmission Split	150
TWO-WHEEL DRIVE FRONT AXLE SYSTEM	
Front Axle Assembly and Steering Linkage	1

DUAL DIMENSIONS

This service manual provides specifications in both U.S. Customary and Metric (SI) systems of measurement. The first specification is given in the measuring system perceived by us to be the preferred system when servicing a particular component, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of 0.011 inch (0.28 mm) would indicate that we feel the preferred measurement in this instance is the U.S. Customary system of measurement and the Metric equivalent of 0.011 inch is 0.28 mm.