

Information and Instructions

This shop manual contains several sections each covering a specific group of wheel type tractors. The Tab Index on the preceding page can be used to locate the section pertaining to each group of tractors. Each section contains the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

Within each section, the material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

I N D E X (By Starting Paragraph)

	Super and Non-Super			Super and Non-Super	
MODELS	66	77-88-770-880	MODELS	66	77-88-770-880
BELT PULLEY	585	585	Valve rotators	434	434
BRAKES			Valve springs	435	435
Band type	575	575	Valve timing	438	438
Disc type	578	578	Valves and valve seats	432	432
CARBURETOR			FINAL DRIVE		
Gasoline and distillate	460	460	Bevel gears adjust	563	563
LPG carburetor—Century	470	470	Bevel gears renew	564	564
LPG filter	473	473	Bull gear, R&R	566	566
LPG regulator	474	474	Bull pinion, R&R	565	565
LPG trouble-shooting	476	476	Differential overhaul	562	562
CLUTCH			Differential, R&R	560	560
Engine clutch adjustment	541	541	Wheel axle bearings, renew	569	569
Engine clutch R&R	542	542	Wheel axle and hsg., R&R	568	568
Engine clutch overhaul	543	543	Wheel axle shaft oil seal, renew	570	570
Power take-off clutch	590	590	Wheel axle shaft, renew	569	569
Power Booster clutch	544	544	FRONT SYSTEM		
COOLING SYSTEM			Front axle member	408	408
Pump	522	522	Support, overhaul	404	404
Radiator	520	520	Pivot pin	410	410
Thermostat	521	521	Radius rod	409	409
DIESEL SYSTEM			Spindle (knuckle)	411	411
Energy cells	494	494	Steering gear (tricycle)	401	401
Fuel supply pump	496	496	Steering gear (axle)	415	415
Fuel system bleeding	482	482	Steering gear (power)	425A	425A
Governor adjust	489A	489A	GOVERNOR		
Nozzles, locating faulty	490	490	Adjustment—non-Diesel engines	510	510
Nozzles, testing	493	493	Adjustment—Diesel engines	489A	489A
Nozzles, R&R	491	491	Overhaul—non-Diesel engines	511A	511A
Nozzle, servicing	492	492	R&R non-Diesel engines	511	511
Preheater	495	495	IGNITION SYSTEM		
Injection pump, R&R	488	488	Battery ignition timing	530	530
Injection pump, timing	486	486	Magneto ignition timing	533	533
Trouble-shooting	481	481	LIFT SYSTEM—Hydraulic		
Smoke stop adjustment	488A	488A	Bleeding system	605	605
DIFFERENTIAL			Flushing system	606	606
Overhaul	562	562	Electrical system	616	616
Remove and reinstall	560	560	Fluid recommendations	604	604
ELECTRICAL			Pump	607	607
Ignition	529	529	Relief valve, test & adjustment	609	609
Generator and regulator	525	525	Trouble-shooting	600	600
Starting motor	526	526	Valves, R&R and overhaul	610	610
ENGINE			Work cylinder	640	640
Assembly, R&R	430	430	LIFT SYSTEM—Mechanical	650	650
Cam followers	436	436	POWER BOOSTER	544	544
Camshaft	441	441	POWER TAKE-OFF		
Connecting rods and bearings	445	445	Clutch adjustment	590	590
Crankshaft and bearings	447	447	Clutch overhaul	591	591
Cylinder head	431	431	Complete unit, R&R	594	594
Cylinder sleeves	443	443	Drive shaft, R&R	592	592
Flywheel	450	450	STEERING GEAR MANUAL	415	415
Front oil seal	439	439	STEERING GEAR, POWER	425A	425A
Main bearings	447	447	TRANSMISSION		
Pistons	443	443	Basic procedure	550	550
Oil pump and relief valve	452	452	Bevel pinion	556	556
Piston pins	444	444	Countershaft	555	555
Piston and rod removal	442	442	Input shaft	553	553
Piston rings	443B	443B	Mainshaft	553	553
Rear oil seal	449	449	Overhaul preparation	552	552
Rocker arms	437	437	Power booster, overhaul	544B	544B
Tappets	436	436	Reverse idler	557	557
Timing gear cover	439	439	Reverse idler, multiple	558	558
Timing gears	440	440	Shifter rails and forks	554	554
Valve guides	433	433			

INDEX (By Starting Paragraph)

MODELS.....	99	Super 99		MODELS	99	Super 99	
	6 Cyl.	HC & D	GM		6 Cyl.	HC & D	GM
BELT PULLEY.....	146	145	145	Timing gears.....	18	18	66B
BRAKES.....	143	143	143	Tune-up.....	—	—	86
CARBURETOR.....	29	29	None	Valve guides.....	12	12	62
CLUTCH				Valve rotators.....	13	13	None
Engine clutch adjustment.....	125A	125A	125A	Valve springs.....	14	14	63
Engine clutch application.....	125	125	125	Valve timing.....	18A	18A	66B
Engine clutch R & R.....	125C	125C	125C	Valves & valve seats.....	12	12	62
Engine clutch overhaul.....	125D	125D	125D	FINAL DRIVE			
Power take-off clutch.....	145E	145E	145E	Bevel gears.....	134	132	132
COOLING SYSTEM				Bull gear.....	141	137	137
Pump.....	46	46	113	Bull pinion.....	140	136	136
Radiator.....	45	45	110	Differential.....	131	130	130
Water nozzles.....	—	—	61E	Wheel axle shaft, & bearings..	142	138	138
DIESEL SYSTEM				FRONT SYSTEM			
Injector Rack.....	—	—	87	Bolster.....	7A	7A	7A
Injector Hole Tubes.....	—	—	61C	Pivot pin bearings.....	6B	6B	6B
Fuel Manifold.....	—	—	100	Radius rod.....	7B	7B	7B
Energy Cells.....	41	41	None	Spindles.....	4	4	4
Fuel supply pump.....	43	43	99	Spindle (knuckle) carriers.....	6	6	6
Fuel system bleeding.....	37	37	None	Steering gear.....	1A	1A	1A
Governor adjust.....	38	38	103	Wheel bearings.....	6A	6A	6A
Nozzles testing.....	40A	40A	92	GOVERNOR			
Nozzles R & R.....	40B	40B	91	Adjustment—non-Diesel engines	44	44	None
Nozzle servicing.....	40C	40C	93	Adjustment—Diesel engines....	38	38	103
Injection pump R & R.....	36F	36F	91	Overhaul—non-Diesel engines..	44A	44A	None
Injection pump timing.....	36	36	90	Overhaul Diesel engines.....	—	—	105
Trouble shooting.....	32	33A	85A	R & R non-Diesel engines.....	44A	44A	None
Starting Aid.....	42	42	101	R & R Diesel engines.....	—	—	104
DIFFERENTIAL				IGNITION SYSTEM			
Overhaul.....	131	130B	130B	Battery ignition timing.....	53	53	None
Remove & reinstall.....	131	130	130	Magneto ignition timing.....	54	54	None
ELECTRICAL				LIFT SYSTEM—Hydraulic			
Ignition.....	52	52	None	Fluid recommendations.....	147	147	147
Generator & regulator.....	50	50	115	Depth control type.....	149	149	149
Starting motor.....	51	51	116	Non-Depth control type.....	150	150	150
ENGINE				Pump.....	149C	149C	149C
Assembly R & R.....	10	10	60	Relief valve adjustment.....	148	148	148
Balance Shaft.....	—	—	69	Pump test specifications.....	149E	149E	149E
Blower (Supercharger).....	—	—	76	Control valve depth system....	149A	149A	149A
Cam followers.....	15	15	64	Control valve non-depth system.	150A	150A	150A
Camshaft.....	19	19	67	Work cylinder Hydro-Stop....	149	149	149
Connecting rods & brgs.	23	23	70H	POWER TAKE-OFF			
Crankshaft & bearings.....	24	24	71	Clutch adjustment.....	None	145E	145E
Cylinder head.....	11	11	61	Clutch overhaul.....	None	145F	145F
Cylinder sleeves.....	21	21	70A	Complete unit R & R.....	146D	145L	145L
Flywheel.....	26	26	73	Drive shaft R & R.....	146D	145H	145H
Front oil seal.....	17	17	72E	STEERING GEAR.....	1	1	1
Main bearings.....	24	24	71	TRANSMISSION			
Oil Cooler.....	—	—	74G	Basic procedure.....	—	127	127
Oil pump & relief valve.....	27	27	74A	Bevel pinion.....	129C	128K	128K
Pistons.....	21	21	70A	Input shaft.....	129A	128J	128J
Piston pins.....	22	22	70F	Intermediate shaft.....	—	128F	128F
Piston & rod removal.....	20	20	70	Mainshaft.....	129A	128J	128J
Piston rings.....	21B	21B	70E	Poppet interlock block.....	—	128B	128B
Rear oil seal.....	25	25	72	Reverse idler.....	129B	128H	128H
Rocker arms.....	16	16	65	Shifter rails & forks.....	129	128A	128A
Tappets.....	15	15	64	Siding gear shaft.....	129A	128K	128K
Timing gear cover.....	17	17	66				

SHOP MANUAL

OLIVER

MODELS SUPER 55HC - SUPER 55 DIESEL - 550 HC - 550 DIESEL

IDENTIFICATION

Tractor serial number and tractor specification number plate is located on the left hand side of the tractor center frame.

Engine serial number is stamped on right side of engine rear flange.

INDEX (By Starting Paragraph)

AXLE, FRONT	1	FINAL DRIVE AND TRANSMISSION	95
AXLE, REAR	115	Bevel Drive Pinion.....	95
BELT PULLEY	123	Bevel Gears Renew.....	106
BRAKES	120	Bevel Gear Bull (Pinion) Bearings.....	110
CLUTCH		Bull Gear	111
Engine (Traction) Clutch.....	80	Bull Pinion	110
Engine (Traction) Clutch Shaft, Removal.....	89	Clutch Shaft (Main Traction).....	89
Power Take-Off Clutch.....	130	Countershaft	96
Power Take-Off Drive Pinion Shaft.....	85B	Differential	100
COOLING SYSTEM		High and Low Range Gears.....	94
Pump	73	Input Double Gear.....	92
Radiator	70	Reverse Idler	97
Thermostat	71	PTO Drive Gear.....	93
DIFFERENTIAL	100	Shifter Rails and Forks.....	91
DIESEL SYSTEM	40	Sliding Gearshaft	95
Bleeding	42	Top Cover	90
Components of System.....	40	Tractor Split	81A & 86
Energy Cells (Precombustion Chambers).....	60	Wheel Axle Bearings.....	115
Fuel Transfer Pump.....	62	Wheel Axle Housing.....	116
Governor, Adjust	52	FRONT SYSTEM AND STEERING	
Injection Pump	42A	Axle, Front	1
Hydraulic Head	45	Front Support	5
Injection Pump Timing.....	46	Pivot Pin, Front Axle.....	4
Nozzle (Injector) Removal.....	56	Power Steering.....(Refer to separate Appendix 1)	
Nozzle Servicing	57	Spindles and Bushings.....	2
Preheater	61	Steering Gear, Adjust.....	6
Smoke Stop Adjustment.....	50	GOVERNOR	
Trouble-Shooting (System)	41	Non-Diesel Models	65
Trouble-Shooting (Injection Pump).....	43	Diesel Models	51
ELECTRICAL		LIFT SYSTEM	
Ignition	77	Internal Control Valve.....	155
Generator	75	Control Adjustment	150A
Starter Motor	76	Cylinder	156
ENGINE		Fluid and Filling.....	144
Assembly R&R	10	Linkage Adjustment	148
Cam Followers	16	Hydraulic Housing	152
Camshaft	19	Pump	153
Connecting Rods R&R.....	20	Lift Arms and Cross Shaft.....	157
Connecting Rods and Bearings.....	25	Main System	152
Crankshaft and Bearings.....	26	Remote System	160
Crankshaft Oil Seals	29	Testing and Relief Valve Setting.....	151
Cylinder Head	11	Trouble Shooting	145
Cylinder Sleeves	22	MANUAL STEERING GEAR	6
Flywheel	31	POWER STEERING (Page 57)	1s
Oil Pump and Relief Valve.....	33A	POWER TAKE-OFF	
Piston and Rod Removal.....	20	Clutch Adjustment	130
Piston Pins	24	Clutch Plates	132
Piston Rings	23	Clutch Drum or Spider.....	132A
Pistons	21	Drive Pinion Shaft.....	135
Rocker Arms	12	Drive Shaft	138
Tappets (Cam Followers)	16	External (Stub) Shaft.....	138
Timing Gear Cover.....	17	TRACTOR SPLIT	81A
Timing Gears	18	TRANSMISSION	84
Valve Guides	13A		
Valve Rotators	15		
Valve Springs	14		
Valves and Valve Seats.....	13		

OLIVER

SHOP MANUAL SUPPLEMENT

Series ■ Super 99GMTC ■ 950 ■ 990 ■ 995

This supplement provides methods for servicing the Super 99GMTC, 950, 990 and 995 tractors which, except for the differences covered in this supplement, are serviced in the same manner as the Super 99 and Super 99 GM models covered in the previous section of this book or in I & T SHOP SERVICE MANUAL No. 0-7.

IDENTIFICATION

Model 950 tractors have the tractor serial and specification numbers stamped on a metal plate which is affixed to left side of clutch dust cover. Engine serial number is stamped on right rear mounting flange of engine.

Models Super 99GMTC, 990 and 995 have the tractor serial and specification numbers stamped on a metal plate which is affixed to the left side of the clutch dust cover. Engine serial number appears in two places: On a metal plate affixed to engine valve cover and on left side of cylinder block.

INDEX (By Starting Paragraph)

In the index which follows, the first column lists the tractor components, the 2nd & 4th columns list the beginning paragraph number located either in this supplement or in the previous section covering the Super 99 tractor in which the desired service information will be found. The 3rd & 5th columns list which section of this manual contains the desired paragraph number.

	Model 950 HC & D	Manual Section	Models Super 99GMTC-990-995	Manual Section
	Paragraph Number		Paragraph Number	
BELT PULLEY	145	Super 99	145	Super 99
BRAKES	143	Super 99	143	Super 99
CARBURETOR	29	Super 99
CLUTCH				
Engine clutch adjustment	125A	Super 99	125A	Super 99
Engine clutch R&R (except 99GMTC & 995)	125C	Super 99	125C	Super 99
Engine clutch R&R (99GMTC & 995)	28	This Supplement
Engine clutch overhaul	125D	Super 99	125D	Super 99
Power take-off clutch	145E	Super 99	145E	Super 99
COOLING SYSTEM				
Pump	46	Super 99	113	Super 99
Radiator	45	Super 99	110	Super 99
Water nozzles	61E	Super 99
DIESEL SYSTEM				
Injector rack	87	Super 99
Injector hole tubes	61C	Super 99
Fuel manifold	100	Super 99
Energy cells	41	Super 99
Fuel supply pump	43	Super 99	99	Super 99
Fuel system bleeding	37	Super 99
Governor adjust	38	Super 99	103	Super 99
Nozzles testing	40A	Super 99	92	Super 99
Nozzles R&R	40B	Super 99	91	Super 99
Nozzle servicing	40C	Super 99	93	Super 99
Injection pump R&R	36F	Super 99	91	Super 99
Injection pump timing	36	Super 99	90	Super 99
Trouble shooting	32	Super 99	85A	Super 99
Starting aid	42	Super 99	101	Super 99
DIFFERENTIAL				
Overhaul	130B	Super 99	130B	Super 99
Remove & reinstall	130	Super 99	130	Super 99
ELECTRICAL				
Distributor	26	This Supplement	26	This Supplement
Generator & regulator	26	This Supplement	26	This Supplement
Starting motor	26	This Supplement	26	This Supplement
ENGINE				
Assembly R&R	10	Super 99	60	Super 99
Balance Shaft	69	Super 99
Blower	76	Super 99
Cam followers	15	Super 99	64	Super 99
Camshaft	19	Super 99	67	Super 99
Connecting rods & brgs.	23	Super 99	70H	Super 99
Crankshaft & bearings	24	Super 99	71	Super 99
Cylinder head	11	Super 99	61	Super 99

Index (Cont.)

	Model 950 HC & D		Models Super 99GMTC-990-995	
	Paragraph Number	Manual Section	Paragraph Number	Manual Section
ENGINE—continued				
Cylinder sleeves	21	Super 99	70A	Super 99
Flywheel	26	Super 99	73	Super 99
Front oil seal	17	Super 99	72E	Super 99
Main bearings	24	Super 99	71	Super 99
Oil Cooler	74G	Super 99
Oil pump & relief valve	27	Super 99	74A	Super 99
Piston	21	Super 99	70A	Super 99
Piston pins	22	Super 99	70F	Super 99
Piston & rod removal	20	Super 99	70	Super 99
Piston rings	21B	Super 99	70E	Super 99
Rear oil seal	25	Super 99	72	Super 99
Rocker arms	16	Super 99	65	Super 99
Tappets	15	Super 99	64	Super 99
Timing gear cover	17	Super 99	66	Super 99
Timing gears	18	Super 99	66B	Super 99
Tune-up	86	Super 99
Valve guides	12	Super 99	62	Super 99
Valve rotators	13	Super 99
Valve springs	14	Super 99	63	Super 99
Valve timing	18A	Super 99	66B	Super 99
Valves & valve seats	12	Super 99	62	Super 99
FINAL DRIVE				
Bevel gears	132	Super 99	132	Super 99
Bull gear	137	Super 99	137	Super 99
Bull pinion	136	Super 99	136	Super 99
Differential	130	Super 99	130	Super 99
Wheel axle shaft, & bearings	138	Super 99	138	Super 99
FRONT SYSTEM				
Bolster	7A	Super 99	7A	Super 99
Pivot pin bearings	6B	Super 99	6B	Super 99
Radius rod	7B	Super 99	7B	Super 99
Spindles	4	Super 99	4	Super 99
Spindle (knuckle) carriers	6	Super 99	6	Super 99
Steering gear	1A	Super 99	1A	Super 99
Wheel bearings	6A	Super 99	6A	Super 99
GOVERNOR				
Adjustment—non-Diesel engines	44	Super 99
Adjustment—Diesel engines	38	Super 99	103	Super 99
Overhaul—non-Diesel engines	44A	Super 99
Overhaul—Diesel engines	105	Super 99
R&R non-Diesel engines	44A	Super 99
R&R Diesel engines	104	Super 99
HYDRAULIC LIFT SYSTEM				
Control Valves	64	This Supplement	64	This Supplement
Electrical Units	70	This Supplement	70	This Supplement
Maintenance	59	This Supplement	59	This Supplement
Pump	63	This Supplement	63	This Supplement
Trouble Shooting	50	This Supplement	50	This Supplement
IGNITION				
Battery ignition timing	27	This Supplement
POWER STEERING				
Control Valve	20	This Supplement	19, 20	This Supplement
Flow Control Valve	14	This Supplement	14	This Supplement
Lubrication and Bleeding	11	This Supplement	11	This Supplement
Power Cylinder	21	This Supplement	19, 21	This Supplement
Pump	15	This Supplement	15, 17	This Supplement
System Operating Pressure	13	This Supplement	13	This Supplement
Trouble Shooting	12	This Supplement	12	This Supplement
POWER TAKE-OFF				
Clutch adjustment	145E	Super 99	145E	Super 99
Clutch overhaul	145F	Super 99	145F	Super 99
Complete unit R&R	145L	Super 99	145L	Super 99
Drive shaft R&R	145H	Super 99	145H	Super 99
STEERING GEAR				
1	1	Super 99	1	Super 99
TORQUE CONVERTER				
Introduction	30	This Supplement
Overhaul	40	This Supplement
Preventative Maintenance	38	This Supplement
Remove and Reinstall	39	This Supplement
Testing	34	This Supplement
Trouble Shooting	33	This Supplement
TRANSMISSION				
Basic procedure	127	Super 99	127	Super 99
Bevel pinion	128K	Super 99	128K	Super 99
Input shaft	128J	Super 99	128J	Super 99
Intermediate shaft	128F	Super 99	128F	Super 99
Mainshaft	128J	Super 99	128J	Super 99
Poppet interlock block	128B	Super 99	128B	Super 99
Reverse idler	128H	Super 99	128H	Super 99
Shifter rails & forks	128A	Super 99	128A	Super 99
Sliding gear shaft	128K	Super 99	128K	Super 99