

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

YANMAR

**Models YM135, YM135D, YM155, YM155D, YM195, YM195D,
YM240, YM240D, YM330 and YM330D**

Tractor serial number is stamped on left side of clutch housing on transmission housing. Engine model and serial number is located on a data plate attached to right side of engine for YM135, YM135D, YM155 and YM155D models. Engine model and serial number is located on a data plate attached to left side of engine for YM195, YM195D, YM240, YM240D, YM330 and YM330D models.

INDEX (By Starting Paragraph)

	YM135, YM135D	YM155, YM155D	YM195, YM195D	YM240, YM240D	YM330, YM330D
BRAKES	210	210	210	210	210
CLUTCH	130	130	130	130	130
COOLING SYSTEM	115	115	115	115	115
DIESEL FUEL SYSTEM					
Filters & Bleeding	85	85	85	85	85
Nozzles	90	90	90	90	90
Thermostart	97	97	97	97	97
Timing	86	86	88	88	88
DIFFERENTIAL					
Front	16	16	21	21	31
Rear	185	185	190	190	195
ELECTRICAL SYSTEM					
Alternator & Regulator	120	120	121	121	121
Starter	125	125	125	125	125
ENGINE					
Camshaft	60	60	61	61	61
Connecting Rods	71	71	71	71	71
Crankshaft	72	72	72	72	73
Cylinder Head	45	45	45	45	45
Flywheel	78	78	78	78	78
Oil Pump	80	80	80	80	80
Pistons & Rings	66	66	66	66	66
Remove & Reinstall	42	42	42	42	42
Tappet Adjustment	47	47	47	47	47
Timing Gears	56	56	57	57	57
Valves & Seats	48	48	48	48	48
FINAL DRIVE					
Front	15	15	20	20	30
Rear	200	200	202	202	204
FRONT AXLE					
Four Wheel Drive	4	4	4	4	4
Two Wheel Drive	1	1	1	1	1
FRONT WHEEL DRIVE	15	15	20	20	30
GOVERNOR	101	101	103	103	103
HYDRAULIC SYSTEM	240	240	240	240	240
POWER TAKE OFF	215	215	220	220	230
STEERING GEAR	10	10	10	10	10
TRANSMISSION	150	150	160	160	170

This service manual provides specifications in both the Metric (SI) and U.S. Customary systems of measurement. The first specification is given in the measuring system used during manufacture, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of "0.28 mm (0.011 inch)" would indicate that the equipment was manufactured using the metric system of measurement and the U.S. equivalent of 0.28 mm is 0.011 inch.