

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

JOHN DEERE

SERIES

2150—2155—2255—2350—2355—2355N—2550—2555

Tractor serial number is stamped in right side of front support and is also located on a plate attached to right side of front support. Engine serial number is stamped on a plate on right side of engine cylinder block.

INDEX (By Starting Paragraph)

BRAKES

Adjust	150
Bleed	149
Brake Test	151
R&R and Overhaul	152

CLUTCH

Bleed System	98A
Clutch Cylinders	100 or 100A
Pedal Adjustment	97, 97A or 98
R&R and Overhaul	102, 102A or 102B
Release Bearing	104 or 104A
Tractor Split	101

CREEPER TRANSMISSION

Operation	116
R&R and Overhaul	118
Trouble-Shooting	117

COOLING SYSTEM

Radiator	89
Water Pump	90

DIFFERENTIAL

Bevel Gears	135
Overhaul	134
Remove and Reinstall	133

DIRECTION REVERSER

Check and Adjust	111
Operation	110
Overhaul	112

ELECTRICAL SYSTEM

Alternator and Regulator	94
Starter Motor	96

ENGINE

Cam Followers	53
Camshaft	56
Connecting Rod Bearings	65
Crankshaft	66
Cylinder Head	48
Cylinder Sleeves	62, 63
Engine Removal	47
Flywheel	68
Front Oil Seal	54
Main Bearings	66
Oil Pump and Relief Valve	70, 70A
Piston and Sleeves	62, 63
Piston Pins and Bushings	64
Piston Rings	62
Rear Oil Seal	67
Rocker Arms	52
Rod & Piston Units	61
Timing Gear Cover	54
Timing Gears	55, 60
Valve Clearance	50
Valve Guides	51
Valves and Seats	49
Valve Springs	51

FINAL DRIVE

Overhaul	140 or 148
Remove and Reinstall	139 or 147

FRONT SYSTEM (TWO-WHEEL DRIVE)

Axle Center Member	1
Spindles and Bushings	3
Tie Rods and Toe-in	4
Wheel Bearings	2

FRONT-WHEEL DRIVE

Differential Unit	12 or 22
-------------------------	----------

FRONT-WHEEL DRIVE (Cont.)

Drive Clutch	13 or 23
Drive Shaft	7 or 18
Front Drive Axle	8 or 19
Solenoid	15 or 25
Steering Knuckle Housing	11 or 21
Tie Rod and Toe-in	6 or 17
Trouble-Shooting	5 or 16
Wheel Hub and Planetary	9 or 20

FUEL SYSTEM

Bleed System	77
Filter	76
Fuel Lift Pump	74
Injection Pump	86
Injector Nozzles	78
Speed Adjustment	88
Timing	59 or 87
Water Trap	75

HI-LO SHIFT

Trouble-Shooting	107
Operation	106
Overhaul	108
Pressure Test	107A

HYDRAULIC LIFT SYSTEM

Hydraulic Pump	175
Load Control	179
Rockshaft Housing	177
System Adjustments	170
System Tests	166 - 169
Trouble-Shooting	165

HYDROSTATIC STEERING

Pressure Control Valve	38
Safety Valve Block	37
Steering Cylinders	42, 43 or 46
Steering Valve	33
Trouble-Shooting	32

PARKING BRAKE

R&R and Overhaul	154
------------------------	-----

POWER STEERING

Pressure Control Valve	29
Steering Cross Shaft	31
Steering Valve	27
Trouble-Shooting	26

POWER TAKE-OFF (CONTINUOUS)

R&R and Overhaul	158
------------------------	-----

POWER TAKE-OFF (FRONT)

Remove and Reinstall	161
Overhaul	162

POWER TAKE-OFF (INDEPENDENT)

Operation	155
Pressure Test	155A
R&R and Overhaul	156

REMOTE CONTROL SYSTEM

Breakaway Coupler	184
Remote Cylinder	185
Selective Control Valve	181 or 182

SOUND GARD BODY

Remove and Reinstall	186
----------------------------	-----

TRANSMISSION (COLLAR SHIFT)

Operation	119
Shafts and Gears	123
Shifter Shafts and Forks	122
Top Cover	120
Tractor Split	121
Transmission Oil Pump	124

TRANSMISSION (SYNCHRONIZED)

Operation	126
Shafts and Gears	130
Shifter Shafts and Forks	128 or 129
Tractor Split	127
Transmission Oil Pump	131

DUAL DIMENSIONS

This service manual provides specifications in both the Metric (SI) and U.S. Customary systems of measurement. The first specification is given in the measuring system used during manufacture, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of "0.28 mm (0.011 inch)" would indicate that the equipment was manufactured using the metric system of measurement and the U.S. equivalent of 0.28 mm is 0.011 inch.