

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

MASSEY-FERGUSON

MODELS MF25-MF130

Tractor Serial Number and Engine Serial Number
both appear on Instrument Panel Name Plate.

INDEX (By Starting Paragraph)

	MF25	MF130	ENGINE (Cont'd.)	MF25	MF130
BELT PULLEY	80	80	Engine adapter plate	28	28
BRAKES			Flywheel	30	30
Adjustment	76	77	Main bearings	27	27
R&R and Overhaul.....	78	79	Oil pan	31	31
CLUTCH			Oil pump	32	32
Adjustment	56	56	Pistons	24	24
Remove & Reinstall.....	57	57	Piston pins	25	25
Overhaul	59	59	Piston rings	24	24
COOLING SYSTEM			Relief valve	34	34
Pump and Fan.....	53	53	Rear oil seal	29	29
Radiator	51	51	Rocker arms	15	15
Thermostat	52	52	Tappet gap adjustment	13	13
DIESEL FUEL SYSTEM			Timing gear cover	16	16
Bleeding	36	36	Timing gears	17	17
Cold Weather Starting Aid	50	50	Timing gear housing	21	21
Fuel Filters	35	35	Valve guides	11	11
Injector Nozzles			Valves and seats	10	10
Overhaul	45	45	Valve springs	12	12
Remove & Reinstall	39	39	FINAL DRIVE		
Testing	38, 40	38, 40	Remove & Reinstall	72	72
Injection Pump			Overhaul	73	73
Remove & Reinstall.....	47	47	FRONT AXLE		
Speed Adjustment	48	48	Axle assembly	1	1
Timing	46	46	Spindles & bushings	2	2
Lift Pump	37	37	Tie rods & toe-in	3	3
Pre-combustion Chambers	49	49	HYDRAULIC SYSTEM		
DIFFERENTIAL			Adjustment	88	88
Remove & Reinstall	66	66	Lift cover R&R	87	87
Overhaul	67	67	Pump	97	97
DIFFERENTIAL LOCK			Overhaul	94	94
Adjustment	70	70	POWER TAKE-OFF	81	81
Overhaul	71	71	STEERING GEAR		
ELECTRICAL SYSTEM	54	54	Adjustment	4	4
ENGINE			Remove & Reinstall	5	5
Assembly R&R	7	8	Overhaul	6	6
Camshaft	22	22	TRANSMISSION		
Connecting rods & bearings.....	26	26	Shafts & gears	64	64
Crankshaft & bearings	27	27	Shifter rails & forks	63	63
Cylinder head	9	9	Synchronizer	65	65
Cylinder sleeves	24	24			