

INDEX (By Starting Paragraph)

	20	Non-Diesel 30	Diesel 30	Non-Diesel 40	Diesel 40	Non-Diesel 50	Diesel 50
BELT PULLEY	320	325	325	327	327	327	327
BRAKES	300	303	303	307	307	310	310
CARBURETOR (NOT LP-GAS)	100	100	...	100	...	100	...
CARBURETOR (LP-GAS)	105	...	105
CLUTCH	210	210	210	210	210	210	210
COOLING SYSTEM							
Radiator	195	195	195	195	195	195	195
Thermostat	196	196	196	196	196	196	196
Water pump	197	199	199	199	199	199	199
DIESEL FUEL SYSTEM							
Energy cells	175	...	175	...	175
Fuel filters	132	...	132	...	132
Injection pump (APE)	152	...	152	...	152
Injection pump (PSB)	160	...	160	...	160
Nozzles	133	...	133	...	133
Preheater	176	...	176	...	176
Quick checks	130	...	130	...	130
DIFFERENTIAL	275	277	277	282	282	282	282
ENGINE							
Cam followers	52	53	53	53	53	53	53
Camshaft	61	63	63	63	63	63	63
Connecting rods & bearings	71	71	71	71	71	71	71
Crankshaft	72	73	73	73	73	73	73
Cylinder head	43	44	45	44	45	44	45
Engine removal	40	41	41	42	42	42	42
Flywheel	77	77	77	77	77	77	77
Ignition timing	201	201	...	201	...	201	...
Injection timing (APE)	152	...	152	...	152
Injection timing (PSB)	160	...	160	...	160
Main bearings	72	73	73	73	73	73	73
Oil pump	78	78	78	78	78	78	78
Pistons & rings	66	67	68	67	68	67	68
Piston pins	70	70	70	70	70	70	70
Piston removal	65	65	65	65	65	65	65
Rear oil seal	74	75	75	75	75	75	75
Rocker arms	54	54	54	54	54	54
Timing gear cover	56	57	57	57	57	57	57
Timing gears	58	60	60	60	60	60	60
Valves & seats	46	47	47	47	47	47	47
Valve guides & springs	48	50	50	50	50	50	50
Valve timing	55	55	55	55	55	55	55
FINAL DRIVE							
Axle shaft	287	290	290	296	296	296	296
Bull gears	287	290	290	296	296	296	296
Bull pinions	286	293	293	295	295	295	295
FRONT SYSTEM							
Axle type	7	7	7	7	7	7	7
Tricycle type	1	2	2	2	2	3	3
GOVERNOR (NON-DIESEL)	180	181	...	181	...	181	...
Diesel (APE)	157	...	157	...	157
Diesel (PSB)	166	...	166	...	166
HYDRAULIC SYSTEM							
Adjustments	366	366	366	366	366	366	366
Control valves	375	375	375	375	375	375	375
Lubrication	365	365	365	365	365	365	365
Pump	380	381	383	385	385	385	385
Work cylinders	390	390	390	390	390	390	390
LP-GAS SYSTEM							
Carburetor	105	...	105
Converter	112	...	112
Trouble shooting	116	...	116
POWER TAKE-OFF (Live type)	332	332	350	350	350	350
Non-continuous type	320	330	330
REAR AXLE	287	290	290	296	296	296	296
STEERING GEAR	20	25	25	32	32	32	32
TRANSMISSION							
Basic procedures	231	244	244	259	259	259	259
Major overhaul	236	250	250	265	265	265	265
Remove & reinstall	230	258	258	258	258