

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

MASSEY-HARRIS

PONY

(Other models begin on page MH-40)

IDENTIFICATION


Tractor serial number is located on plate on right side of front frame, above front axle.

Engine serial number is located on left side of cylinder block.

BUILT IN THESE VERSIONS

Adjustable Axle—Serial Nos. PGA 1001 & Up.

Standard Axle—Serial Nos. PGS 1001 & Up.

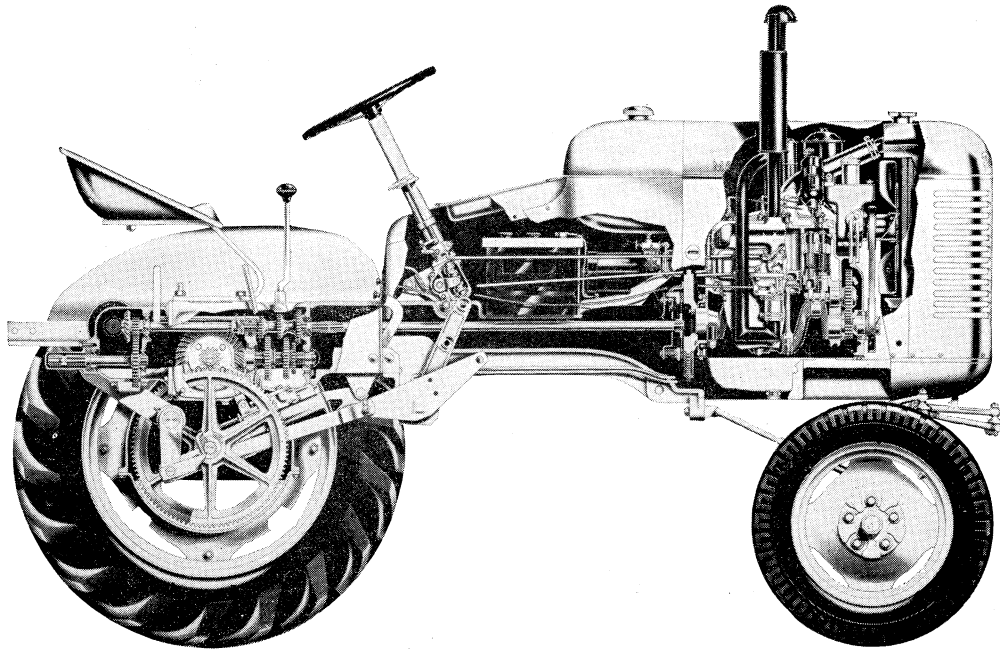

Massey-Harris "Pony"

INDEX (By Starting Paragraphs)

BELT PULLEY	64	ENGINE CONT.		GOVERNOR	
BRAKES	61	Oil seal (front)	18	Adjust	32
CARBURETOR	31	Oil seal (rear)	26	Overhaul	34
CLUTCH	41	Piston rings	23	POWER LIFT	
COOLING SYSTEM		Piston pins	24	Adjustment	70
Fan	35	Piston & rod removal	21	Control valve	71
Radiator	36	Timing gears	19	Cylinder	71
DIFFERENTIAL	54	Valves	12	Pump	73
ENGINE		Valve guides & springs	14	Trouble shooting	72
Cam followers	15	Valve seats	13	POWER TAKE-OFF	65
Camshaft	20	Valve timing	17	REAR AXLE	59
Connecting rods & bearings	24	FINAL DRIVE		STEERING GEAR	
Crankshaft	25	Axle shafts	59	Adjustment	5
Cylinder head	11	Bull gears	59	Overhaul	9
Flywheel	27	Bull pinions	60	TRANSMISSION	
Ignition timing	38	FRONT SYSTEM		Bevel pinion shaft	51
Main bearings	25	Axle main member	1	Input shaft	52
Oil pump	29	Steering knuckles	4	Reverse idler	53
Oil pressure	30	Steering linkage	2	Shifter rails	48