

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

INDEX (By Starting Paragraph)

| | Model 21 (Colt) | Model 23 (Mustang) | Model 33 Non-Diesel | Model 33 Diesel | Model 44 Special Non-Diesel | Model 44 Special Diesel | Models 55 & 555 Non-Diesel | Models 55 & 555 Diesel |
|-----------------------------------------|-----------------------|--------------------------|---------------------------|-----------------------|-----------------------------------|-------------------------------|----------------------------------|------------------------------|
| BELT PULLEY..... | 170 | 170 | 171 | 171 | 171 | 171 | 172 | 172 |
| BRAKES (Disc type brakes)..... | 163 | 163 | 164 | 164 | 164 | 164 | | |
| (Shoe type brakes)..... | | | 165 | 165 | 165 | 165 | 165 | 165 |
| CARBURETOR (Not LP-Gas)..... | 64 | 64 | 64 | | 64 | | 64 | |
| (LP-Gas)..... | | | | | 65 | | 65 | |
| CLUTCH | | | | | | | | |
| Adjust over-center..... | | | | | 124 | 124 | 124 | 124 |
| Adjust spring loaded..... | 122 | 122 | 123 | 123 | 123 | 123 | 123 | 123 |
| Overhaul over-center..... | | | | | 128 | 128 | 128 | 128 |
| Overhaul spring loaded..... | 127 | 127 | 127 | 127 | 127 | 127 | 127 | 127 |
| COOLING SYSTEM | | | | | | | | |
| Overhaul water pump..... | 117 | 117 | 118 | 118 | 118 | 118 | 118 | 118 |
| DIESEL FUEL SYSTEM | | | | | | | | |
| Energy cells..... | | | | 109 | | 109 | | 109 |
| Fuel filters..... | | | | 82 | | 82 | | 82 |
| Nozzles..... | | | | *84 & 92A | | *84 & 92A | | *84 & 92A |
| Timing, PSB pump..... | | | | 100 | | 100 | | 100 |
| APE pump..... | | | | | | 93 | | 93 |
| DIFFERENTIAL | | | | | | | | |
| With Live PTO..... | | | 151 | 151 | 151 | 151 | | |
| Without Live PTO..... | 149 | 149 | 150 | 150 | 150 | 150 | 152 | 152 |
| ENGINE | | | | | | | | |
| Cam followers..... | 37 | 37 | 38 | 38 | 38 | 38 | 38 | 38 |
| Camshaft..... | 45 | 45 | 47 | 47 | 47 | 47 | 47 | 47 |
| Connecting rods and bearings..... | 55 | 55 | 55 | 55 | 55 | 55 | 55 | 55 |
| Crankshaft..... | 56 | 56 | 57 | 57 | 57 | 57 | 57 | 57 |
| Cylinder head..... | 26 | 26 | 27 | 27 | 27 | 27 | 27 | 27 |
| Engine removal..... | 25 | 25 | 25 | 25 | 25 | 25 | 25 | 25 |
| Ignition timing..... | 120 | 120 | 120 | | 120 | | 120 | |
| Main bearings..... | 56 | 56 | 57 | 57 | 57 | 57 | 57 | 57 |
| Oil pump..... | 62 | 62 | 63 | 63 | 63 | 63 | 63 | 63 |
| Pistons and cylinders (or sleeves)..... | 50 | 50 | 51 | 52 | 51 | 52 | 51 | 52 |
| Piston pins..... | 54 | 54 | 54 | 54 | 54 | 54 | 54 | 54 |
| Piston removal..... | 49 | 49 | 49 | 49 | 49 | 49 | 49 | 49 |
| Piston rings..... | 50 | 50 | 51 | 52 | 51 | 52 | 51 | 52 |
| Rear oil seal..... | 58 | 58 | 59 | 59 | 60 | 60 | 60 | 61 |
| Rocker arms..... | | | 39 | 39 | 40 | 40 | 40 | 40 |
| Timing gears and cover..... | 41 | 41 | 43 | 43 | 43 | 43 | 43 | 43 |
| Valves and seats..... | 28 | 28 | 29 | 30 | 29 | 30 | 29 | 30 |
| Valve guides..... | 31 | 31 | 32 | 33 | 32 | 33 | 32 | 33 |
| Valve tappets..... | 37 | 37 | 38 | 38 | 38 | 38 | 38 | 38 |
| Valve springs..... | 34 | 34 | 34 | 34 | 34 | 34 | 34 | 34 |
| FINAL DRIVE | | | | | | | | |
| Axle shafts..... | 156 | 156 | 159 | 159 | 159 | 159 | 161 | 161 |
| Bull gears..... | | | 158 | 158 | 158 | 158 | 161 | 161 |
| Bull pinions..... | | | 157 | 157 | 157 | 157 | 160 | 160 |
| GOVERNOR (Non-Diesel)..... | 110 | 110 | 113 | | 113 | | 113 | |
| (Diesel) APE pump..... | | | | | | 97 | | 97 |
| (Diesel) PSB Pump..... | | | | 105 | | 105 | | 105 |
| HYDAULIC LIFT | | | | | | | | |
| Adjustments..... | 181 | 181 | 187 | 187 | 200 | 200 | 206 | 206 |
| Control valve..... | 210 | 210 | 210 | 210 | 210 | 210 | 210 | 210 |
| Mounted cylinder..... | 211 | 211 | 211 | 211 | 211 | 211 | | |
| Lubrication and bleeding..... | 179 | 179 | 179 | 179 | 179 | 179 | 179 | 179 |
| Pump..... | 215 | 215 | 215 | 215 | 215 | 215 | 215 | 215 |
| Remote cylinders..... | 214 | 214 | 214 | 214 | 214 | 214 | 214 | 214 |
| Sequence valve..... | | | 212 | 212 | | | | |
| Trouble shooting..... | 180 | 180 | 180 | 180 | 180 | 180 | 180 | 180 |
| LP-GAS SYSTEM | | | | | | | | |
| Adjust carburetor..... | | | | | 65 | | 65 | |
| Filter..... | | | | | 74 | | 74 | |
| Regulator..... | | | | | 75 | | 76 | |
| Trouble shooting..... | | | | | 77 | | 77 | |
| POWER STEERING..... | | | | | | | 15** | 15** |
| POWER TAKE-OFF..... | 174 | 174 | 175 | 175 | 175 | 175 | 178 | 178 |
| STEERING GEAR | | | | | | | | |
| Adjust row crop..... | 3 | 3 | 3 | 3 | 3 | 3 | | |
| Adjust standard..... | 6 | 6 | 6 | 6 | 6 | 6 | 8 | 8 |
| TRANSMISSION OVERHAUL | | | | | | | | |
| Bevel pinion shaft..... | 133 | 133 | 140 | 140 | 140 | 140 | 146 | 146 |
| BP and PTO drive shaft..... | | | 137 | 137 | 137 | 137 | 172 | 172 |
| Countershaft..... | 134 | 134 | | | | | 148 | 148 |
| Main drive gear..... | 131 | 131 | | | | | 145 | 145 |
| Mainshaft..... | 132 | 132 | 139 | 139 | 139 | 139 | 146 | 146 |
| Reverse idler..... | 135 | 135 | 141 | 141 | 141 | 141 | 147 | 147 |
| Shifter rails and forks..... | 130 | 130 | 138 | 138 | 138 | 138 | | |
| Sliding gear shaft..... | 132 | 132 | 140 | 140 | 140 | 140 | | |

*Paragraph 92A begins on page 62. **Paragraph 15 begins on page 58.