

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

INDEX (By Starting Paragraph)

	F12	012	W12	F20	1020	F30	W30	W40
	F14	014	W14					
BELT PULLEY	165	165	165	167	169	168	169	169
BRAKES	160	160	160	160	163	160	163	163
CARBURETOR	62	62	62	61	62	61	61	61
CLUTCH								
Adjustment (Spring L.).....	84	84	84	83	83	83	83	83
Adjustment (O.C.)	86
Remove & Reinstall.....	87	88	88	87	89	87	89	89
COOLING SYSTEM	74	74	74	74	74	74	74	74
DIFFERENTIAL	142	142	142	143	145	143	145	145
ELECTRICAL SYSTEM	81	81	81	81	81	81	81	81
ENGINE								
Cam followers	33	33	33	34	34	34	34	35
Camshaft	40	40	40	40	40	40	40	40
Con. rods & brgs.....	49	49	49	50	50	50	50	50
Crankshaft	51	51	51	52	52	52	52	53
Cylinder head	24	24	24	25	25	25	25	26
Cylinder sleeves	44	44	44	44	44	44	44	44
Engine removal	20	21	21	22	23	22	23	23
Flywheel	55	55	55	56	56	56	56	55
Ignition timing	82	82	82	82	82	82	82	82
Main bearings	51	51	51	52	52	52	52	53
Oil pump	57	57	57	58	58	58	58	59
Pistons	43	43	43	43	43	43	43	43
Piston pins	47	47	47	48	48	48	48	47
Piston removal	41	41	41	42	42	42	42	41
Piston rings	45	45	45	45	45	45	45	45
Rear oil seal.....	54	54	54	54	54	54	54	54
Rod bearings	49	49	49	50	50	50	50	50
Timing gear cover.....	38	38	38	38	38	38	38	38
Timing gears	39	39	39	39	39	39	39	39
Valve guides	31	31	31	31	31	31	31	31
Valves & seats.....	27	27	27	27	27	27	27	27
Valve springs	32	32	32	32	32	32	32	32
Valve (rocker) levers.....	36	36	36	36	36	36	36	36
Valve timing	37	37	37	37	37	37	37	37
FINAL & MAIN DRIVE								
Bevel gears, adjust.....	140	140	140	140	140	140	140	140
Bevel gears, renew.....	141A	141A	141A	141B	141C	141B	141C	141C
Bull gears	150	150	150	152	145	152	145	145
Bull pinions	142	142	142	151	146	151	146	146
Countershaft	151	...	151
Differential	142	142	142	143	145	143	145	145
Wheel axle	150	150	150	152	153	152	153	153
FRONT AXLE	1	1	1	1	1	1	1	1
GOVERNOR	66	66	66	68	68	68	68	71
OILING SYSTEM	57	57	57	58	58	58	58	59
POWER TAKE-OFF	166	166	166	167	170	168	170	170
STEERING GEAR	6	8	8	6	15	6	8	8
TRANSMISSION	101	101	101	110	119	110	119	119
Bevel pinion shaft.....	106	106	106	114	125	114	130	138
Belt pulley shaft.....	122	...	127	133
Drive pinion	136
Countershaft	109	109	109	137
P.T.O. drive shaft.....	108	108	108	117	...	117
Remove & Reinstall.....	111	120	111	120	120
Reverse idler	107	107	107	115	125A	115	131	139
Shifter rails & forks.....	103	103	103	113	123	113	128	134
Spline shaft	104	104	104	114	124	114	129	135
Transmission shaft	105	105	105	116	...	116