

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

TRACTOR COMPONENTS

Formerly Standard Units

This manual provides general overhaul and troubleshooting data for bench repair and adjustments, including specifications, on standard tractor components used on tractors manufactured prior to 1970. For information covering the removal and installation of many components in this manual, please refer to the manufacturer- and model-specific I&T Shop Service Manuals.

★ NOTE ★

Throughout this manual, you will find reference to specification tables. To locate the desired table, refer to the TRACTOR COMPONENTS SPECIFICATIONS section of this manual, after page 64.

INDEX (by page number)

	Page Number		Page Number
CARBURETORS		DISTRIBUTORS	
General Overhaul	2	Auto-Lite & Delco-Remy	27
Carter Series BB	2	Wico	30
Carter Series UT	4	GENERATORS	
Carter Series WO	4	Auto-Lite & Delco-Remy	32
Marvel-Schebler Series DLTX	6	MAGNETOS	
Marvel-Schebler Series TRX	7	Bosch MJB	44
Marvel-Schebler Series TSV	8	Bosch MJC	45
Marvel-Schebler Series TSX	8	Bosch MJH & MRD	46
Marvel-Schebler Series TTX	9	Case 4CMA	47
Tillotson Series YC	10	Case 4JMA	49
Tillotson Series YX	10	Case 41	50
Zenith Series K	11	Edison-Splitdorf CD	51
Zenith Series TU	12	Edison-Splitdorf RM	52
Zenith Series 22	12	Fairbanks-Morse FM	52
Zenith Series 28 & 228	13	Fairbanks-Morse FM-X	53
Zenith Series 50	14	Fairbanks-Morse RV	54
Zenith Series 61, 62, 161 & 162	15	International-Harvester F4 & F6	55
Zenith Series 63	15	International-Harvester H4	56
Zenith Series 67	16	International-Harvester J4	58
Zenith Series 124½ & 193½	17	Wico C	58
Zenith Series 261-8	17	Wico X	59
Zenith Series 267	18	RELAYS AND REGULATORS	
CLUTCHES		Auto-Lite & Delco-Remy	38
General	19	SPECIFICATIONS	after page 64
Auburn (Atwood)	21	STARTING MOTORS & SWITCHES	
Borg & Beck Type A & E	22		
Borg & Beck Type Q	23		
Long Type 8½ CB	24		
Long Type 9CF, 10CF & 11CF	24		
Rockford II, RM, RR & TT	25		

I&T Shop Service

P.O. Box 12901, Overland Park, KS 66282-2901
Phone: 800-262-1954 Fax: 800-633-6219
itshopmanuals.com

July, 2003
November, 2007