

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interspersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

FERGUSON

Models TE20, TO20 and TO30

Tractor serial number stamped on instrument panel name plate.

Engine serial number stamped on engine name plate which is located on distributor side of engine.

INDEX (By Starting Paragraph)

BELT PULLEY	105A	ENGINE continued . . .		GOVERNOR	
BRAKES		Flywheel R&R	27	Adjustment, minor	50
Adjustment	100-101	Flywheel timing marks	28	Adjustment, major	50A
R&R and overhaul	102	Front oil seal	18	R&R and overhaul	51
CARBURETOR	40	Ignition timing	60-61	HYDRAULIC SYSTEM	
CLUTCH		Main Bearings	25A	Adjustment	120-123
Interchangeability	70	Oil filter	30	Interchangeability	119-119A
Overhaul	74	Oil pump	29	Lift cover	129-130C
Pedal adjustment	71	Pistons	22	Pump	125-128G
Remove & reinstall	73	Piston pins	23	Trouble shooting	124A-124D
COOLING SYSTEM		Piston & rod removal	21	Work cylinder	130A
Fan	57	Piston rings	22	IGNITION SYSTEM	
Pump	57	Rear oil seal	26	TE20	60
Radiator	55	Rocker arms	16	TO20-TO30	61
Thermostat	56	Tappets	15	POWER TAKE-OFF	110-111
DIFFERENTIAL		Timing gear cover	18	REAR AXLE	
Overhaul	91	Timing gears	19	Bearing, renewal	96
Remove & reinstall	90	Valve guides	13	Lubrication	96
ELECTRICAL		Valves & valve seats	12	Seals, renewal	96
Distributor	60-61	Valve springs	14	Shaft, R&R	95
Generator	65-66	Valve timing	17	STEERING GEAR	
Generator regulator	65-66	FINAL DRIVE		Adjustment	4-5
Starting motor	67	Bevel gears	92A-93	Overhaul	7
ENGINE		Differential overhaul	91	Remove & reinstall	6
Assembly R&R	10	Differential R&R	90	TRANSMISSION	
Cam followers	15	Wheel axle shaft bearings adjust	94	Assembly R&R	81
Camshaft	20	Wheel axle shaft bearings renew	96	Basic procedure	80-80D
Connecting rods & bearings	24	Wheel axle shaft & housing R&R	97	Bevel pinion	92A
Crankshaft & bearings	25A-25B	Wheel axle shaft & housing R&R	97	Clutch shaft	82
Crankshaft oil seals	18, 26	Wheel axle shaft oil seal renew	96	Countershaft	85
Cylinder head	11	Wheel axle shaft R&R	95	Interchangeability	79
Cylinder sleeves	22	FRONT SYSTEM		Main drive gear & shaft	82
		Axle main member	1	Main shaft	84
		Axle pivot pin & bushing	2	Reverse gear	86
		Steering gear adjust	4-5	Shifter rails and forks	83A
		Steering gear overhaul	7		
		Steering gear R&R	6		
		Steering spindles	3		