

BELT PULLEY	
BRAKES	
BRAKE ACCUMULATOR	
CARBURETOR	
CLUTCH	
Adjust	
R&R and overhaul (Syncro Range)	
R&R and overhaul (Power Shift)	
COOLING SYSTEM	
Radiator	
Water Pump	
DIESEL SYSTEM	
Bleed System	
Filter	
Injection Pump (DBG & JDB)	
Injection Pump (CDC & CBC)	
Injectors	
Timing (DBG & JDB)	
Timing (CDC & CBC)	
DIFFERENTIAL	
Bevel Gears	
Overhaul	
Remove and Reinstall	
Differential Lock	
ELECTRICAL SYSTEM	
Alternator & Regulator	
Distributor Timing	
Starter Motor	
ENGINE	
Balancer Shafts	
Camshaft Gear	
Camshaft	
Connecting Rod Bearings	
Crankshaft	
Cylinder Head	
Cylinder Sleeves	
Engine Removal	
Flywheel	
Front Oil Seal	
Idler Gears	
Ignition Timing	
Injection Timing	
Main Bearings	
Oil Pump	
Pistons	
Piston Pins	
Piston Rings	
Rear Oil Seal	
Timing Gear Cover	
Timing Gears	
Valve Guides	
Valve and Seats	
Valve Springs	
Valve Timing	

FINAL DRIVE—(Except "Hi-Crop")	
Remove and reinstall	
Overhaul	
FINAL DRIVE ("Hi-Crop")	
Remove and reinstall	
Overhaul	
FRONT SYSTEM	
Axle and support	
Pedestal	
"Roll-O-Matic"	
Spindles and bushings	
GOVERNOR (Non-Diesel)	
Adjust	
Overhaul	
Remove and reinstall	
HYDRAULIC SYSTEM	
Brakes	
Leakage test	
Lift	
Operation	
Pump	
Remote cylinder	
Remote valves	
Steering system	
Testing system	
Transmission pump (Syncro Range)	
Transmission Pump (Power Shift)	
Weight transfer valve	
POWER TAKE-OFF	
Drive gears	
Operation	
REAR AXLE	
STEERING SYSTEM	
Bleeding	
Control unit	
Operation	
TRANSMISSION (Syncro Range)	
Bevel pinion shaft	
Countershaft	
Control quadrant	
Drive shaft	
Pump	
Synchronizer clutches	
TRANSMISSION (Power Shift)	
Adjustment	
Bevel pinion shaft	
Operation	
Overhaul	
Park pawl	
Reduction gears	
Remove & reinstall	
Tow disconnect	
Trouble shooting	