

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.


HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

INDEX (By Starting Paragraph)

	540	550	550	560	570	570
	Gas	Diesel			Gas	Diesel
BELT PULLEY	186	187	187	187	187	187
BRAKES	184	184	184	184	184	184
CARBURETOR	100	100	100
CLUTCH (Engine)						
Adjustment	153	154	154	154	154	154
Clutch shaft	157	157	157	157	157	157
Remove and Reinstall.....	155	155	155	155	155	155
COOLING SYSTEM						
Radiator	141	142	142	142	142	142
Thermostat	143	143	143	143	143	143
Water pump	144	145	145	146	145	145
DIESEL FUEL SYSTEM						
Bleeding	106	108	106
Fuel filters	102	105	102
Injection nozzles	109	109	109
Injection pump (Bosch).....	118	118
Injection pump (C.A.V.).....	130
Injection pump (Roosa).....	125	125
Pre-combustion chambers	136
Quick checks	101	101	101
DIFFERENTIAL	175	175	175	177	177	177
ENGINE						
Cam followers	47	48	48	49	48	48
Camshaft and/or bearings...	64	66	69	72	66	69
Connecting rods and bearings.	83	83	83	83	83	83
Crankshaft	84	85	85	86	85	85
Cylinder head	33	34	35	36	34	35
Cylinder sleeves	78	78	79	78	78
Engine removal	30	31	31	32	31	31
Flywheel	92	92	92	93	92	92
Ignition timing	148	150	150
Injection timing (Bosch).....	118	118
Injection timing (C.A.V.).....	130
Injection timing (Roosa).....	125	125
Main bearings	84	85	85	86	85	85
Oil pressure	97	98	98	99	98	98
Oil pump	94	95	95	96	95	95
Pistons and rings.....	74	75	76	77	75	76
Piston pins	80	81	81	82	81	81
Piston removal	73	73	73	73	73	73
Rear oil seal	87	88	88	89	88	88
Rocker arms	50	50	51	50	50
Timing gear cover.....	57	58	58	59	58	58
Timing gears	60	61	62	63	61	62
Valve rotators	56	56	58
Valves and seats.....	37	38	38	39	38	38

	540	550	550	560	570	570
	Gas	Diesel			Gas	Diesel
ENGINE (Continued)						
Valve guides and springs.....	40	42	42	45	42	42
Valve timing	52	53	54	55	53	54
FINAL DRIVE						
Axle shaft	183	183	183	183	183	183
Bevel gears	174	174	174	174	174	174
Bull gears	181	181	181	182	182	182
Bull pinions	179	179	179	180	180	180
Differential	175	175	175	177	177	177
FRONT SYSTEM						
Axle type	2	2	2	2	2	2
Tricycle type	1	1	1	1	1
GOVERNOR (non-diesel)	137	138	138
Diesel (Bosch)	123	123
Diesel (C.A.V.)	133
Diesel (Roosa)	128	128
HYDRAULIC LIFT SYSTEM						
Adjustments	201	201	201	201	201	201
Control valves	210	210	210	211	211	211
Lubrication	200	200	200	200	200	200
Pump	212	213	213	215	215	215
Three-point hitch	218	220	220	222	222	222
Work cylinders	223	223	223	223	223	223
POWER STEERING SYSTEM						
Flow control and relief valve..	17	18	18	18	18	18
Lubrication and bleeding.....	13	14	14	14	14	14
Operating pressure	16	16	16	16	16	16
Power unit	21	23	23	23	23	23
Pump	19	20	20	20	20	20
Trouble-shooting	15	15	15	15	15	15
Upper pedestal	28	28	28	28	28
POWER TAKE-OFF	190	190	190	190	190	190
REAR AXLE	183	183	183	183	183	183
STEERING GEAR						
Adjustment	9	11	11	11	11	11
R&R and overhaul.....	10	12	12	12	12	12
TRANSMISSION						
Bevel pinion shaft.....	170	170	170	170	170	170
Countershaft	168	168	168	168	168	168
Input shaft	167	167	167	167	167	167
Remove and reinstall.....	160	160	160	161	161	161
Reverse idler	169	169	169	169	169	169
Shifter rails and forks.....	171	171	171	171	171	171
Top cover	162	163	163	163	163	163

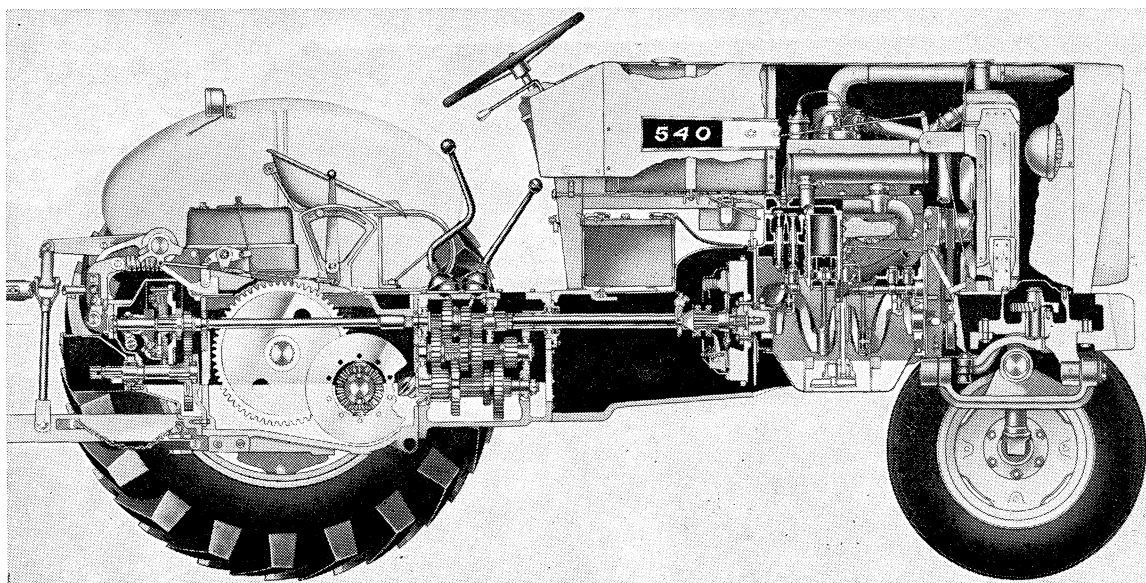

SERIES 540