

Information and Instructions

This individual shop manual is one unit of a series on wheel type tractors. Contained in it are the necessary specifications and the brief but terse procedural data needed by a mechanic when repairing a tractor on which he has had no previous actual experience.

The material is arranged in a systematic order beginning with an index which is followed immediately by a Table of Condensed Service Specifications. These specifications include dimensions, fits, clearances and timing instructions. Next in order of arrangement is the procedures paragraphs.

In the procedures paragraphs, the order of presentation starts with the front axle system and steering and proceeding toward the rear axle. The last paragraphs are devoted to the power take-off and power lift systems. Interpersed where needed are additional tabular specifications pertaining to wear limits, torquing, etc.

HOW TO USE THE INDEX

Suppose you want to know the procedure for R&R (remove and reinstall) of the engine camshaft. Your first step is to look in the index under the main heading of ENGINE until you find the entry "Camshaft." Now read to the right where under the column covering the tractor you are repairing, you will find a number which indicates the beginning paragraph pertaining to the camshaft. To locate this wanted paragraph in the manual, turn the pages until the running index appearing on the top outside corner of each page contains the number you are seeking. In this paragraph you will find the information concerning the removal of the camshaft.

SHOP MANUAL

OLIVER

MODELS

SUPER 44-440

IDENTIFICATION

Tractor serial number and tractor specification number plate is located on the clutch shaft cover at rear of battery. Engine serial number is stamped on left side of cylinder block.

INDEX (By Starting Paragraph)

AXLE, FRONT	1	ENGINE—Continued	
AXLE, REAR	69	Timing Gears	17
BELT PULLEY	73	Valve Guides	12
BRAKES	70	Valve Springs	12
CLUTCH		Valves and Valve Seats	11
Engine Clutch	50	FINAL DRIVE AND TRANSMISSION	
Engine Clutch Shaft, Removal	51B	Bevel Drive Pinion	61
COOLING SYSTEM		Bevel Gears Renew	64
Pump	43	Bull Gear	69
Radiator	41	Bull Pinion	68
Thermostat	42	Clutch Shaft	51B
DIFFERENTIAL	65	Differential	65
ELECTRICAL		Reverse Idler	60
Ignition	45	Shifter Rails and Forks	59
Generator	47	Wheel Axle Bearings	69
Starter Motor	49	FRONT SYSTEM AND STEERING	
ENGINE		Front Support	4
Assembly R&R	9	Pivot Pin, Front Axle	6
Cam Followers	14	Spindles and Bushings	1
Camshaft	19	Steering Gear, Adjust	7
Connecting Rods R&R	21	GOVERNOR	36
Connecting Rods and Bearings	24	LIFT SYSTEM	
Crankshaft and Bearings	25	Control Valve	87
Crankshaft Rear Oil Seal	26	Control Adjustment	75
Cylinder Head	10	Cylinder	89
Flywheel	28	Fluid and Filling	74
Oil Pump	29	Hydraulic Housing	84
Piston and Rod Removal	21	Pump	83
Piston Pins	23	Lift Arms and Cross Shaft	90
Piston Rings	22	Testing and Relief Valve Setting	80
Pistons	22	Trouble-Shooting	75
Tappets (Cam Followers)	14	MANUAL STEERING GEAR	7
Timing Gear Cover	16	POWER TAKE-OFF	73
		TRANSMISSION	52